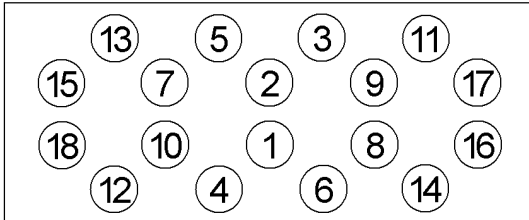


Anziehvorschrift für Zylinderkopf		330.760	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Nissan		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete		* 25 Nm 50 Nm 100 Nm ☐ 180° + 45 Nm ➤ 95° ➤ 95°		
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 97 mm; $\frac{1}{2}$: 0,60 mm; 1 Loch/hole				
Mot: ZD30DDTi				
3,0 ltr.TD				
96-125 kW (131-170PS)				
Patrol 05/06➔				
Cabstar 10/06➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*330.760*	