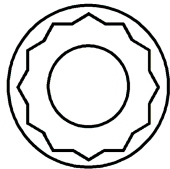
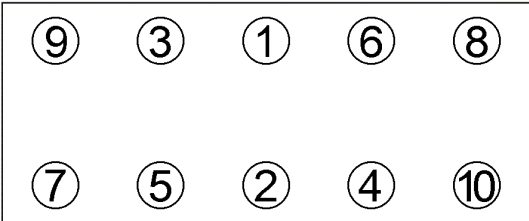


Anziehvorschrift für Zylinderkopf		530.490 passend für / suitable for adaptable à / adaptable a Toyota	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	1-6: 150 Nm 7-10: 85 Nm 1-10: 90° 1-10: 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Toyota 2.8L DOHC Mot.: 1GD-FTV ⚙: 1,25 mm / Ø: 93,5 mm / Mark: D Hilux, HiAce, Fortuner, Land Cruiser, Innova			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*530.490*	