



**SERVICEINFO**

**AIC** Germany  
Automotive Components

## **BRAKE LIGHT SWITCH**

AIC article no.: 56712, 56713, 56714 / OE reference no.: 6Q0 945 511, 1K2 945 511, 1C0 945 511A

### **Installation note for brake light switch**



#### **DISMANTLING THE SWITCH:**

1. Disconnect the plug from the brake light switch.
2. Remove the switch from the holder by turning it 45° to the left.



#### **BEFORE YOU INSTALL THE NEW SWITCH IN THE VEHICLE, YOU SHOULD CONSIDER A FEW THINGS:**

- The brake pedal must be in the unloaded position during installation and must remain in this position.
- Before installation, the switch may be damaged by pressure on the plunger. It is also not functional or electronically testable.



#### **INSTALLING THE NEW SWITCH:**

1. Insert the new switch into the opening of the retaining plate.  
Press and turn the switch approx. 45° to the right until you hear a click.
2. The switch is thus activated and can be checked electronically.
  - Check that the inner nose of the switch is in good contact with the groove stop.  
This ensures that the switch is correctly mounted.
3. Reconnect the switch and check that the plug is seated correctly.
4. Carry out a functional test of the lights by pressing the brake pedal.
  - Make sure that after installation of the brake light switch, all error codes can be deleted.



#### **Brake light switch**

AIC Art.No.: 56712, 56713, 56714

OE-reference no.: 6Q0 945 511, 1K2 945 511, 1C0 945 511A