

Anziehvorschrift für Zylinderkopf			287.777		
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Ford		Das Original
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete					
A  B 			⑤ ① ③ ⑦ ⑥ ④ ② ⑧		
Anziehen/ Tightening/ Serrage/ Apriete			B		
✱ 40 - 55 Nm 50 - 70 Nm ● 20 min 73 - 83 Nm ★ 15 min 95 - 115 Nm			✱ 35 - 40 Nm 70 - 75 Nm ● 5 min ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
95 mm Ø, rechts/right					
2,8 Ltr. V6, 99/110/118 kW (135/150/160 PS)					
Capri, Capri (USA) 1973>, Pinto(USA) 1974>1978, Granada ab 08/1977>, Sierra ab 09/1983>					
2,8 Ltr. V6 EFI, 110 kW (150 PS)					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*287.777*		