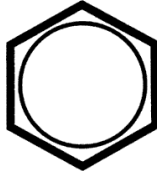
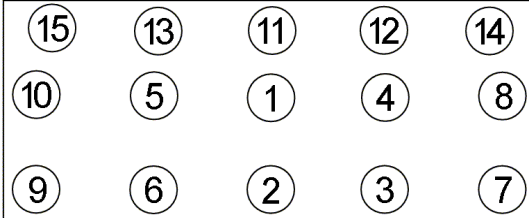


Anziehvorschrift für Zylinderkopf		329.320	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Chrysler/Dodge		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete		* 1-10 11-15 1-10 11-15 1-10 1-10 1-10 11-15 34 Nm (25 ft. lbs.) 20 Nm (15 ft. lbs.) 54 Nm (40 ft. lbs.) 20 Nm (check) 61 Nm (45 ft. lbs.) 90° 34 Nm (25 ft. lbs.)		
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
6.4L V8 16V SRT Apache				
Mot.: ESG, ESH				
mounting position: left				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*329.320*	