

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

648.610

passend für / suitable for
adaptable à / adaptable a

Subaru / Toyota / Scion




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



325.930
M 10x1,5x117

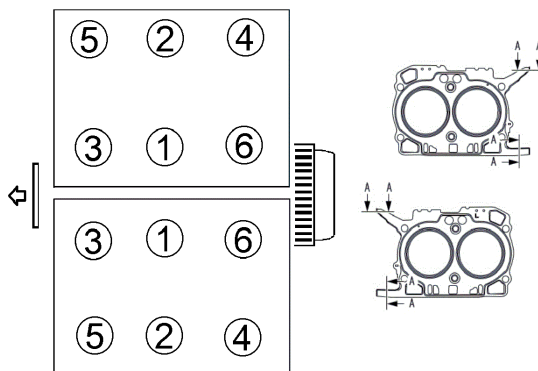

Anziehen/
Tightening/
Serrage/
Apriete

Pos. A: Dirko Compund

- 1 - 6: 20 Nm
- 1 - 6: 100 Nm
- 1 - 6: lösen 360°
- 1 - 6: 20 Nm
- 1 - 6: 42 Nm
- 1 & 2: 100°
- 3 - 6: 50°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

2.0 ltr. 16V

mounting position: left

Ø: 89,5 mm / ÷: 0,5 mm

Toyota GT 86

Subaru BRZ

Scion FR-S Coupe

Mot.: FA20

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

23/11/14

648.610