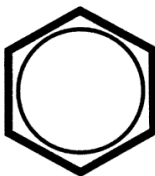
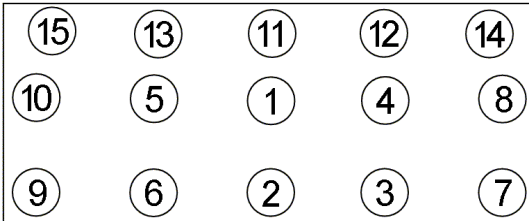


Anziehvorschrift für Zylinderkopf		329.380 passend für / suitable for adaptable à / adaptable a Chrysler/Dodge	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			

Anziehen/	*		
Tightening/			
Serrage/	1-10	34 Nm (25 ft. lbs.)	
Apriete	11-15	20 Nm (15 ft. lbs.)	
	1-10	54 Nm (40 ft. lbs.)	
	11-15	20 Nm (check)	
	1-10	61 Nm (45 ft. lbs.)	
	1-10	➤ 90°	
	11-15	34 Nm (25 ft. lbs.)	

Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

6.4L V8 16V SRT Apache

Mot.: ESG, ESH

mounting position: right

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*329.380*
--	------------------