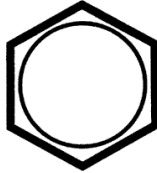


Anziehvorschrift für Zylinderkopf		051.340 passend für / suitable for adaptable à / adaptable a Honda	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
706.120 M 10 x 140			
Anziehen/ Tightening/ Serrage/ Apriete * 30 Nm 68 Nm			
Zeichenerklärung / Explanations / Explication / Explicacion			
	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement tiempo de espera
	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
✚ 1,26 mm, Ø 76,0 mm			
Mot. :D13B2 1,3 ltr. 16V, 55 kW (75 PS)			
Civic			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*051.340*	