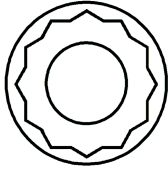


Anziehvorschrift für Zylinderkopf		061.310 passend für / suitable for adaptable à / adaptable a Mazda	 Das Original		
Tightening Instructions for Cylinder Head					
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo					
					
707.680 M 12 x 113 x1,5					
<table> <tr> <td>Anziehen/ Tightening/ Serrage/ Apriete</td> <td> * 29 Nm ➤ 90 ➤ 90° </td> </tr> </table>				Anziehen/ Tightening/ Serrage/ Apriete	* 29 Nm ➤ 90 ➤ 90°
Anziehen/ Tightening/ Serrage/ Apriete	* 29 Nm ➤ 90 ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion					
* ➤ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor Ø 80 mm Mot.: PN26, PN27, PN46, PN54, PN62 1,7 ltr. Diesel 323					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*061.310*			