

Installation Instructions



- Make sure all breathers and oil hoses are free from blockage or contamination.
- Replace breathers/hoses if required.
- Clean cylinder head rocker gasket contact surfaces.
- Do not use any silicon RTV, cover and gasket must be fitted dry.
- Follow the correct tightening sequence (see diagram).
- Torque rocker cover bolts to 9 Nm.