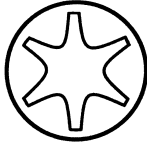
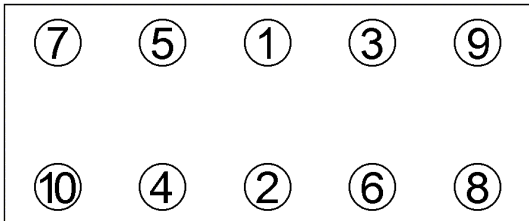


Anziehvorschrift für Zylinderkopf		164.271	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	Ford
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		Das Original	
			
802.880 M 12 x 136			
Anziehen/ Tightening/ Serrage/ Apriete	* ● □ ➤	10 Nm 100 Nm 3 min 180° 70 Nm 120°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 83,3 mm : 1,52 mm			
Mot: RFN; RVA; RTK; RTJ; RFA; RTE; RFD RFK; RFB; RFM; RTD; RTF; RTG; RTH RFL; RTC; RFS			
Ford: Fiesta; Escort; Mondeo Mazda: 121			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*164.271*	