

IMPORTANT:

THE TOP STUD MOUNT **MUST FACE THE **FRONT** OF THE VEHICLE**

1. Locate the hole in the upper spring seat towards the front of the vehicle. Install the included nut, tighten until snug. (Figure 1)
2. Using an appropriate jack, lift the lower axle until the spring seat contacts the lower spring mount. (Figure 2)



FIGURE 1

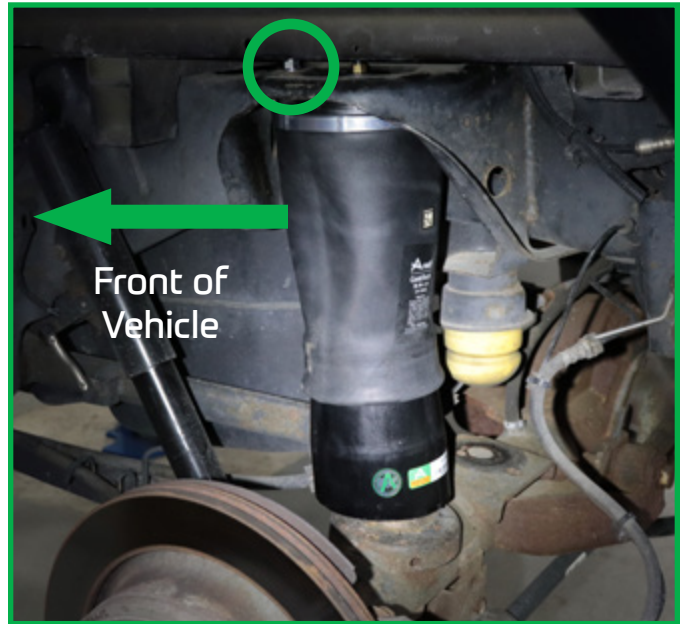


FIGURE 2

3. Using the scan tool, run a short-time inflation to seat the spring.
4. Remove the jack and run the full inflation routine. (Figure 12)



FIGURE 3

Arnott™

Suspension Products

Arnott US Business Office:

www.arnottinc.com

100 Sea Ray Drive
Merritt Island, FL 32953

Call: 800.251.8993

321.868.3016

Fax: 321.868.3703

Email: techassistance@arnottinc.com

Arnott Europe Business Office:

www.arnotteurope.com

Docterskampstraat 1E/1F, 3
5222 AM 's-Hertogenbosch (NL)

NL Phone: +31 73 7850 580

DE Phone: +31 85 2087 438

UK Phone: +44 203 3186 124

BE Phone: +32 258 846 90


ES Phone: +34 91 901 10 56

FR Phone: +32 78 48 46 93


Email: info@arnotteurope.com




Air Springs

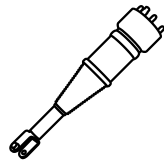


Struts

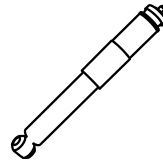


Shocks

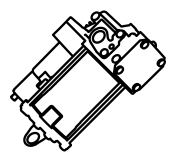


Compressors

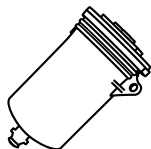


Dryers

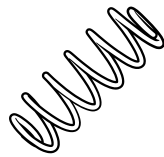

Coil Spring
Conversion Kits

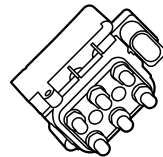

Valve Blocks

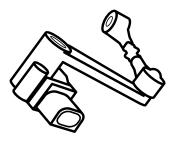

Ride Height
Sensors