

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

092.770


passend für / suitable for
adaptable à / adaptable a

Caterpillar / Perkins




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

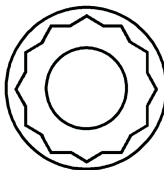

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

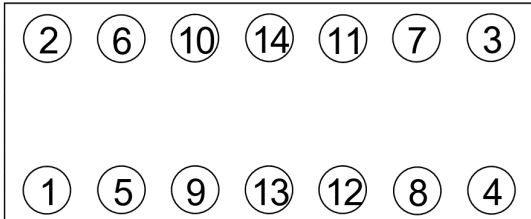

Anziehen/ Tightening/ Serrage/ Apriete	* 50 Nm ➤ 100 Nm ➤ 225 °			
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

✚ 1,4 mm, Ø 107 mm

Mot.: C7.1 "ACERT", 1206F-E70TA "Panther"

7,0 ltr. 24v

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

092.770