




TECHNICAL BULLETIN

TB0061- BCH029 | BCH030 | BCH032 | BCH104
Cylinder Heads

Issue: Oil feed holes not used by auxiliary components must be plugged to prevent oil loss & pressure drop.

Some applications have auxiliary components that use the oil feed hole as shown below. If the application you're working on doesn't require this function, the hole must be plugged with the screw and washer provided.

Failure to do so will result in a loss of oil & oil pressure and any damage, as a result, will void the FAI warranty.

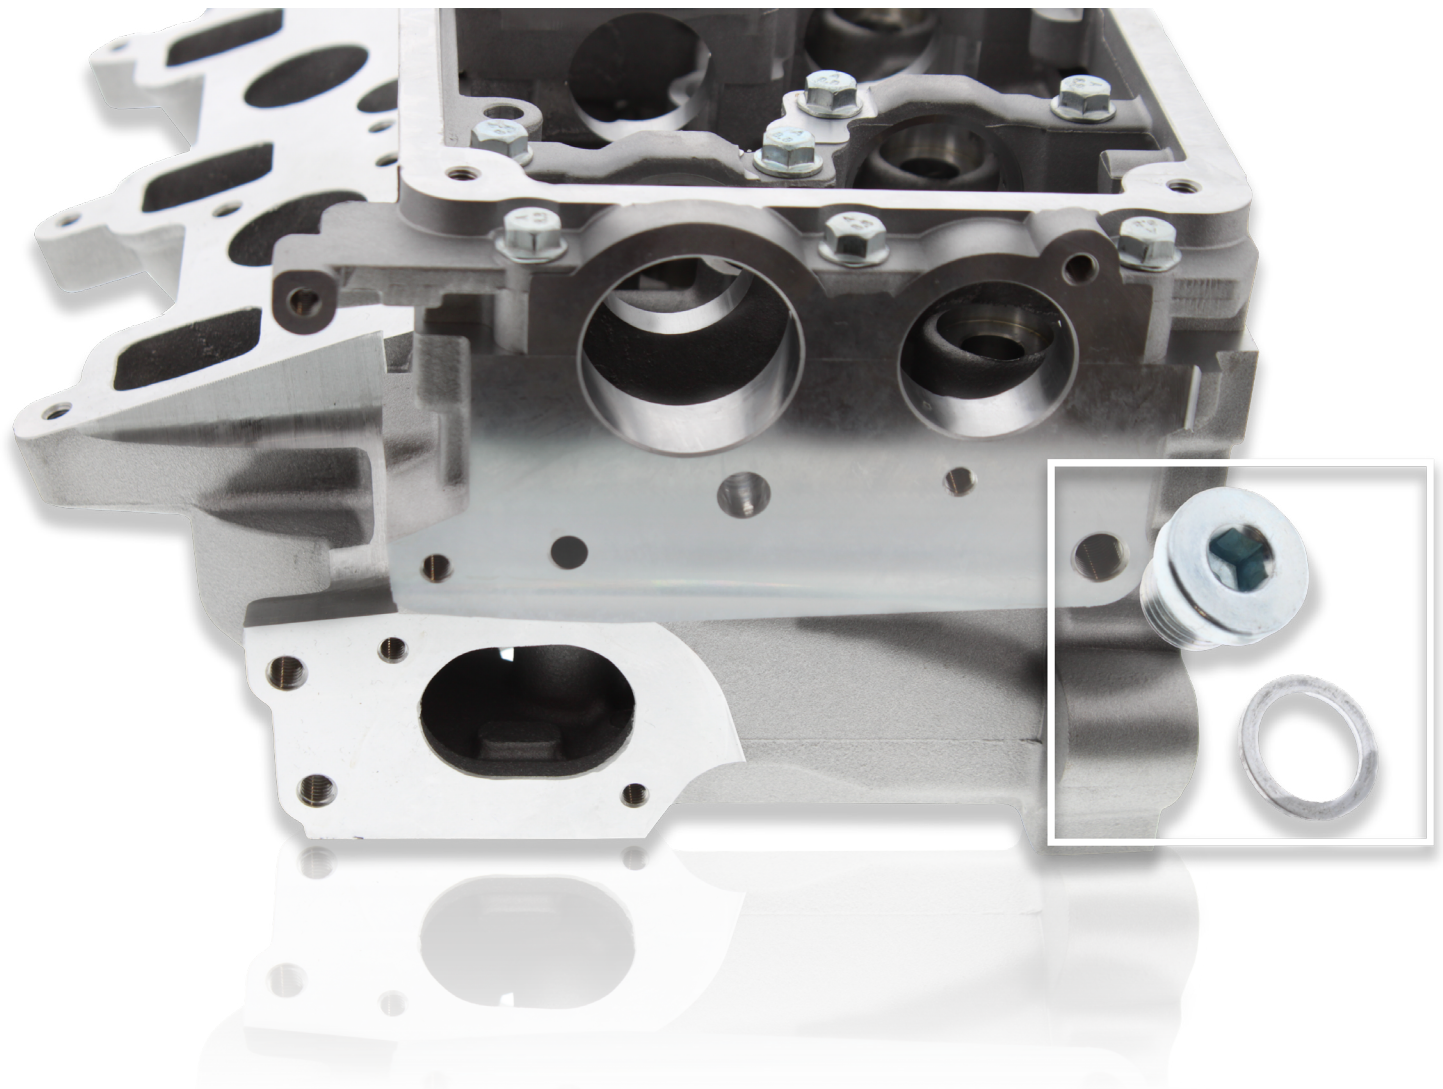

WARNING! CHECK FITMENT

FAI products are designed for use in standard, unmodified vehicles and are not intended for custom or altered applications. All components must be installed by a qualified technician.

Please note: FAI products are supplied without fitting instructions.

For more information, email technical@faiauto.com

faiauto.com

