

▼ Honda HRV

▼ Honda HRV

- Ⓓ Wechselintervall alle ...
- ⒼⒷ Replacement interval ...
- Ⓘ Sostituzione dopo ...
- Ⓕ Intervalle de replacement ...
- Ⓔ Intervalle de cambio ...
- Ⓝ Vervanging elke ...

15.000 KM /

10.000 MI

- Ⓓ ... oder nach 1 Jahr
- ⒼⒷ ... or after 1 year
- Ⓘ ... or dopo 1 anno
- Ⓕ ... ou 1 fois par an
- Ⓔ ... o después de 1 ano
- Ⓝ ... of 1 keer per jaar

micronAir®

Honda HRV 99 →

80000439 / CC1111 / MC 660  
21652990 / CP1111 / MP 160

### Einbauanleitung

Innenraumfilter

### Fitting instructions

Cabin air filter

### Istruzioni di montaggio

Filtro abitacolo

### Notice de montage

Filtre d'habitacle

### Instrucciones de montaje

Filtro de habitáculo

### Inbouwhandleiding

Interieurfilter

www.micronair.com

© by Freudenberg Vliesstoffe KG 12/2002

