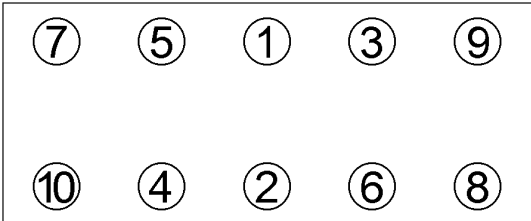


Anziehvorschrift für Zylinderkopf		075.960	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a BMW		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
802.661 M 12x1,5x147				
Anziehen/ Tightening/ Serrage/ Apriete	*  	40 Nm 80 Nm 50 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✚ 1,65 mm, Ø 84,5 mm, 3 Löcher/holes/trous/agujeros/fori				
Mot.: M47 D20				
E46 318d, 320d				
E39 520d				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*075.960*	