

Anziehvorschrift für Zylinderkopf		058.841 passend für / suitable for adaptable à / adaptable a PSA	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 				
152.550 M 12x1,5x123				
Anziehen/ Tightening/ Serrage/ Apriete	✱ ➤ A 30 Nm 70 Nm 120°	✱ ➤ ➤ B 20 Nm 60 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,5 mm, Ø 82 mm, 4 Kerben/notches/encoches/muescas				
Mot.: XUD7, 161, 161A, A9A 1,7-1,8 ltr. Diesel, 43-44 kW (58-60 PS)				
Berlingo, BX, C15, Visa, Xsara, ZX 205, 306, 309, Partner				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*058.841*	