

Anziehvorschrift für Zylinderkopf		704.270 passend für / suitable for adaptable à / adaptable a Iveco	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
12 8 4 1 5 9 13 11 7 3 2 6 10 14				
Anziehen/ Tightening/ Serrage/ Apriete		* 60 Nm 216 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 115 mm; $\frac{1}{16}$: 2,1 mm				
Mot: 8360.04 (6855 ccm) 8360.05 (8102 ccm)				
120.14 R/T, 140.14, 150.14 120.17 H, 150.17, 159.17				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*704.270*	