


<b>Anziehvorschrift für Zylinderkopf</b>	<b>075.480</b>		
<b>Tightening Instructions for Cylinder Head</b>			passend für / suitable for
<b>Instructions de serrage pour culasse</b>			adaptable à / adaptable a
<b>Prescripciones de apriete para culatas</b>			<b>Mazda</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



707.660  
M 11 x 105



Anziehen/ \* 20 Nm  
Tightening/ ➤ 90°  
Serrage/ ➤ 90°  
Apriete

**Zeichenerklärung / Explanations / Explication / Explicacion**

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

✚ 0,62 mm, Ø 84,5 mm

Mot.: FP/FS 1,8 ltr.-2,0 ltr.

323, 626, MX-6, Premacy, Xedos 6, Ford Laser

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*075.480\***