

Anziehvorschrift für Zylinderkopf		204.990		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Mitsubishi		
		Das Original		
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
86139 104257				
Anziehen/ Tightening/ Serrage/ Apriete *50 +/- 2 Nm ➤90° ➤90° ☐Lösen 50 +/- 2 Nm ➤90° ➤90° ➤90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
* 	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★ 	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐ 	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
● 	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤ 	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*204.990*		