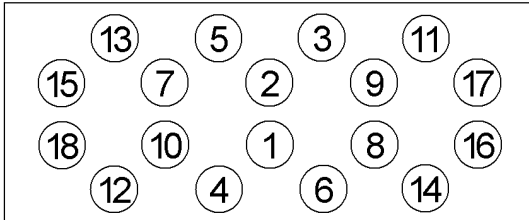


Anziehvorschrift für Zylinderkopf		104.351 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	39-44 Nm 54-59 Nm 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✚ 1,3 mm, Ø 95 mm				
Mot.: TD25, 2,5 ltr. 59-76 kW (80-103 PS)				
Pick up, Urvan				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*104.351*	