


# LuK GearBOX – Repair Solution for Manual Transmission

Disassembly and assembly  
Peugeot/Citroen MA Transmission from 01/2003

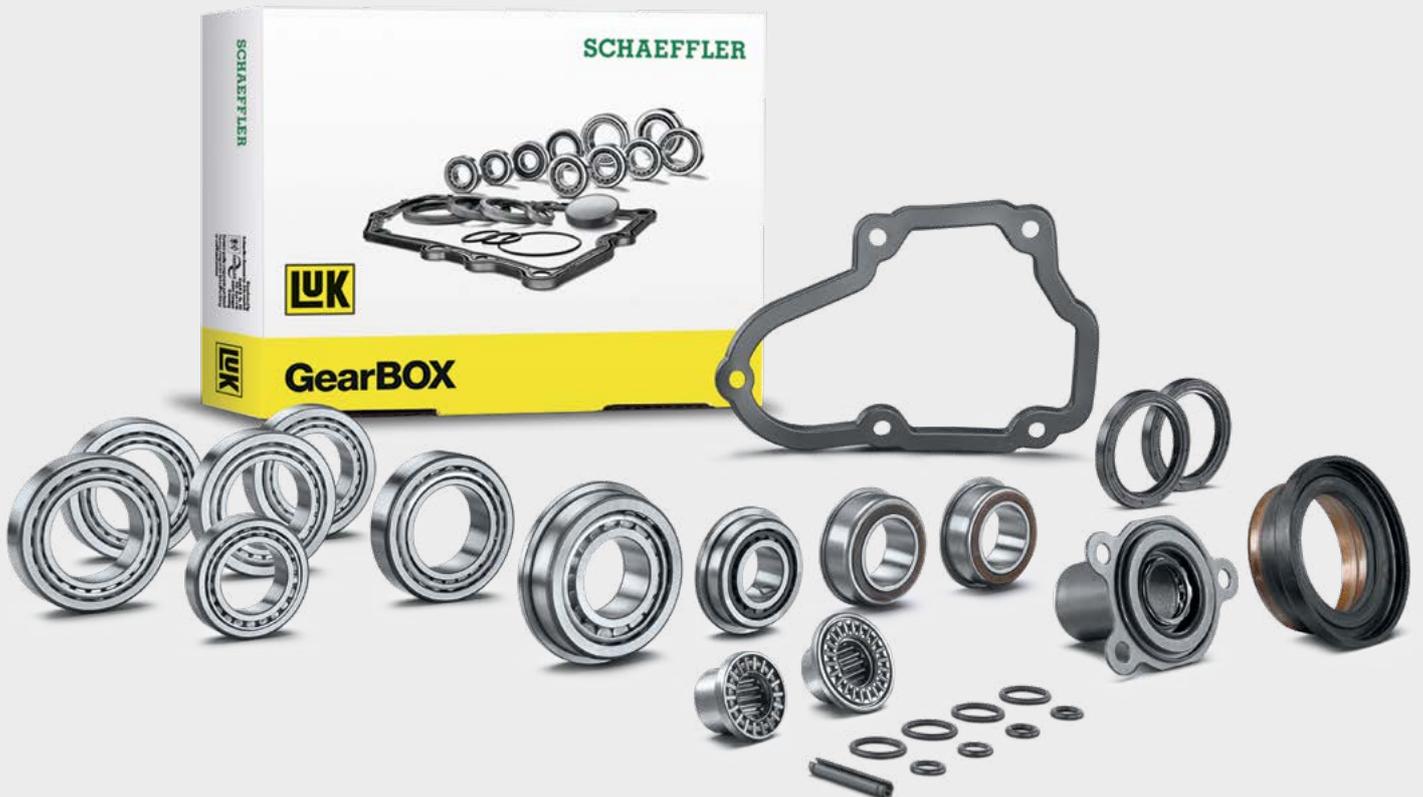

The content of this brochure shall not be legally binding and is for information purposes only. To the extent legally permissible, Schaeffler Automotive Aftermarket GmbH & Co. KG assumes no liability out of or in connection with this brochure.

All rights reserved. Any copying, distribution, reproduction, making publicly available or other publication of this brochure in whole or in extracts without the prior written consent of Schaeffler Automotive Aftermarket GmbH & Co. KG is prohibited.

Copyright ©  
Schaeffler Automotive Aftermarket GmbH & Co. KG  
May 2018

## Schaeffler in the Automotive Aftermarket – more innovation, more quality and more service.

### Schaeffler in the Automotive Aftermarket – always the first choice for vehicle repair.

Whenever a vehicle needs to go to the garage, our products and repair solutions are first choice to fix them. With our system competence in transmission, engine, and chassis, we are a reliable partner around the world. Whether passenger cars, light and heavy commercial vehicles, or tractors – our optimally tuned components allow fast and professional parts replacement.

Our products are based on a comprehensive systems approach. Innovation, technical expertise, and the highest material and manufacturing quality make us not only one of the leading development partners for vehicle manufacturers, but also a pioneering provider of value-retaining spare parts and complete repair solutions for clutches and clutch release systems, engine and transmission applications, and chassis applications in original-equipment quality – right up to the appropriate special tools.

For over 50 years, we have offered everything needed for transmission repair under the LuK brand. Besides the LuK RepSet family and products for the entire hydraulic release system for professional clutch repair, the portfolio also includes the dual mass flywheel and components for expert repair of transmissions and differentials. It also includes professional solutions for transmission repair of commercial vehicles and tractors.

### Schaeffler REPERT – the service brand for garage professionals.

SCHAEFFLER  
**REPERT**

With REPERT, we offer a comprehensive service package for our products and repair solutions. Looking for specific information about damage diagnosis? Are you in need of particular tools to help make your everyday garage routine easier? Whether online portal, service hotline, installation instructions and videos, training seminars, or events – you get all technical services from a single source.

Register now for free, in just a few clicks, at:  
[www.repxpert.com](http://www.repxpert.com).



The parts contained in the LuK GearBOX can be assigned to the installation position in the transmission using the parts list and this brochure. The figures in the instructions are used for this purpose, e.g. (1).

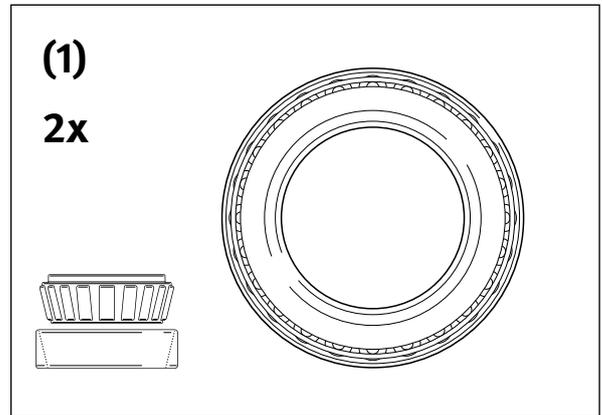


Fig. 1

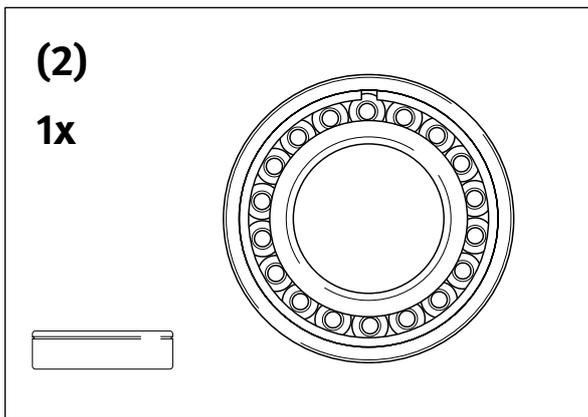


Fig. 2

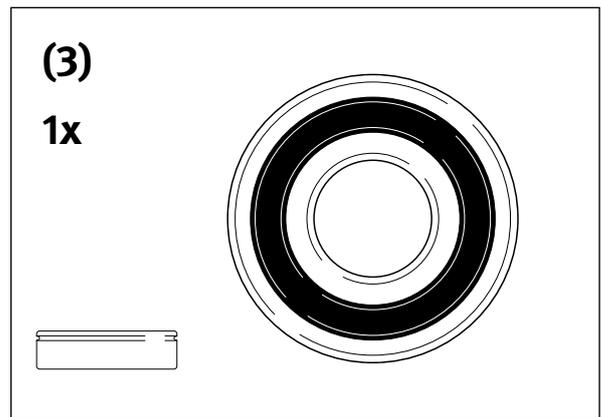


Fig. 3

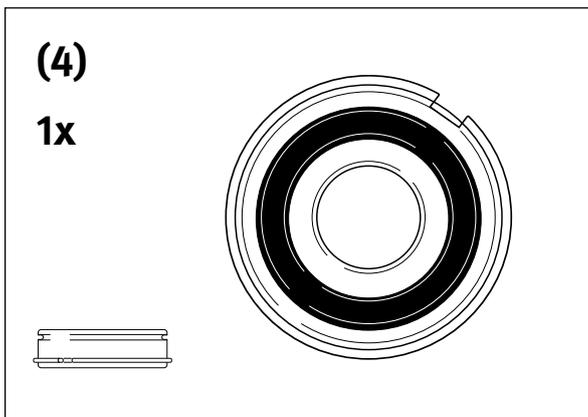


Fig. 4

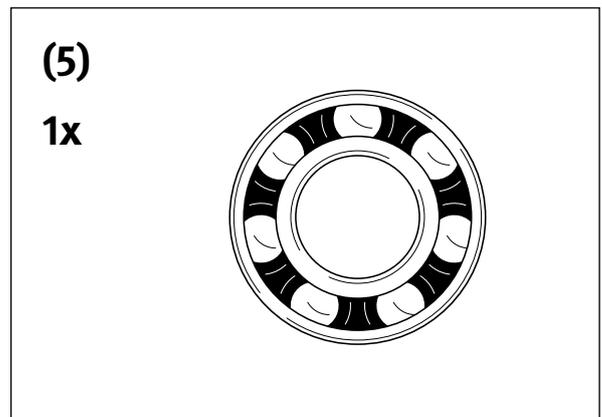


Fig. 5

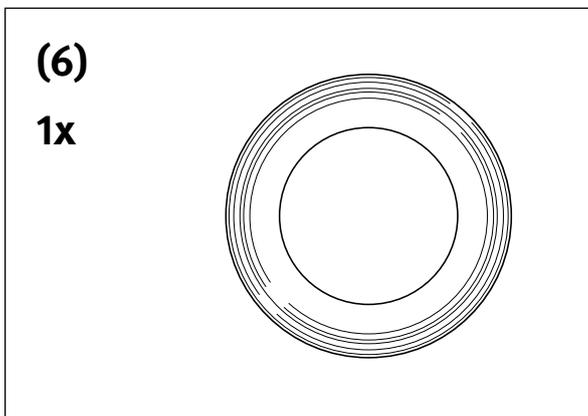


Fig. 6

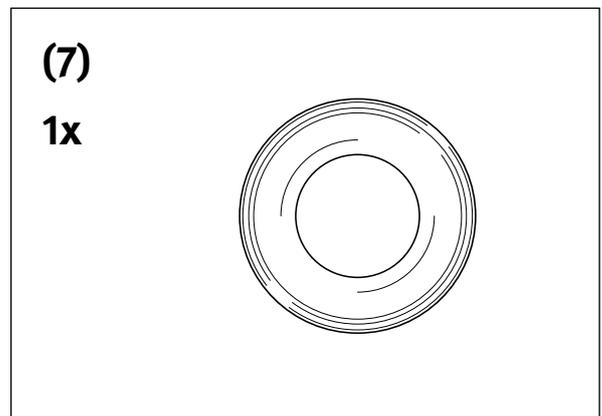


Fig. 7

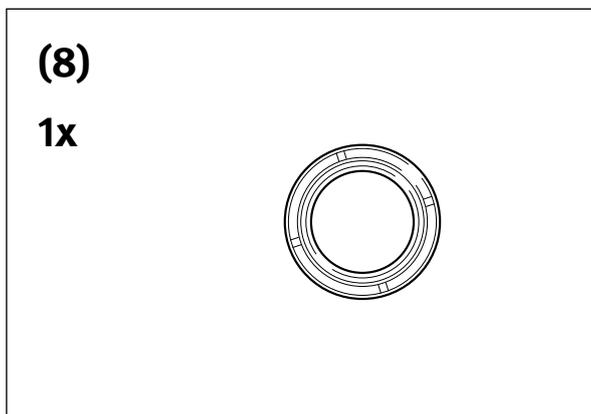


Fig. 8

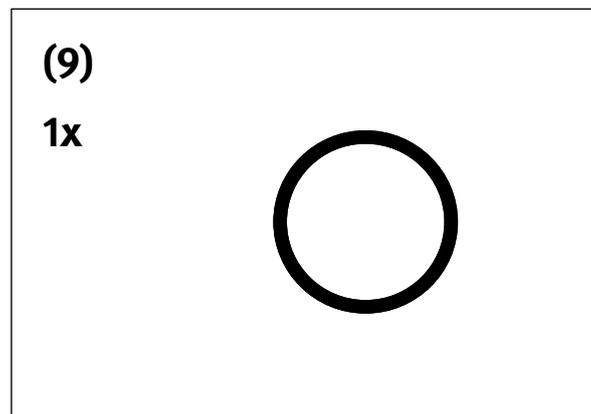


Fig. 9

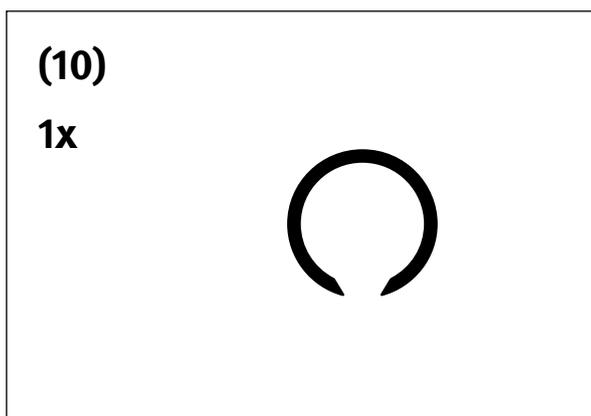


Fig. 10

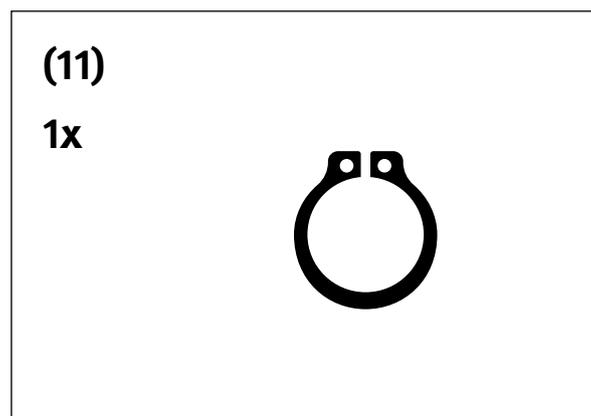


Fig. 11

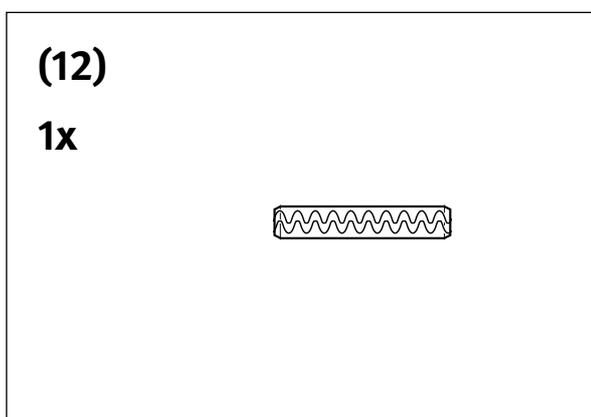


Fig. 12

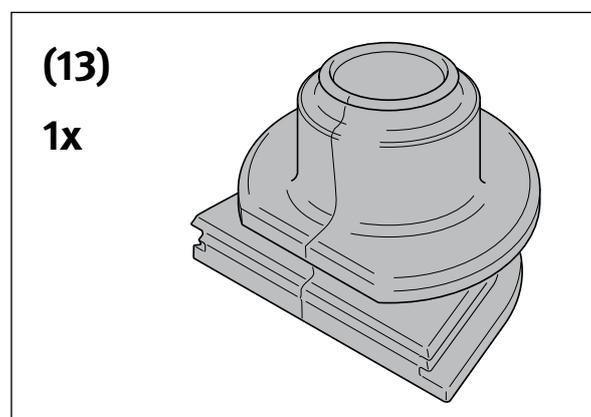


Fig. 13

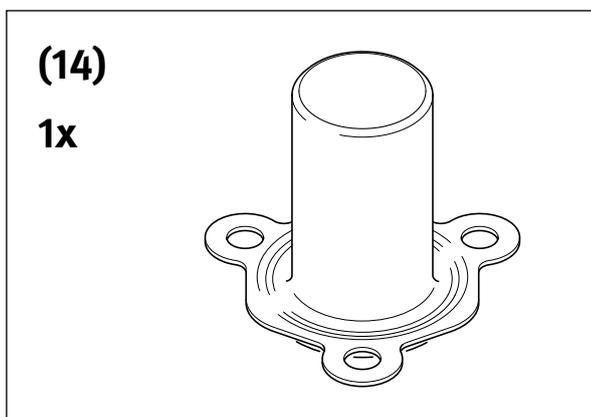


Fig. 14

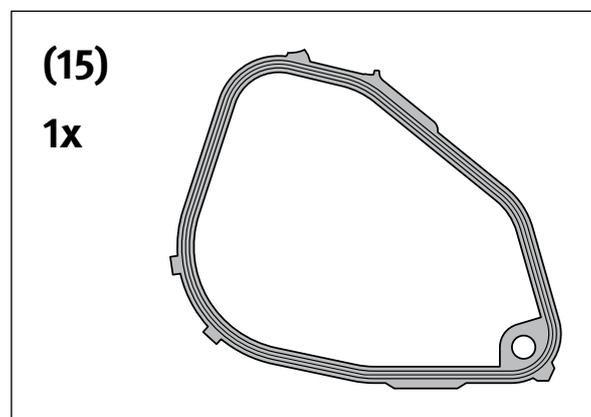


Fig. 15

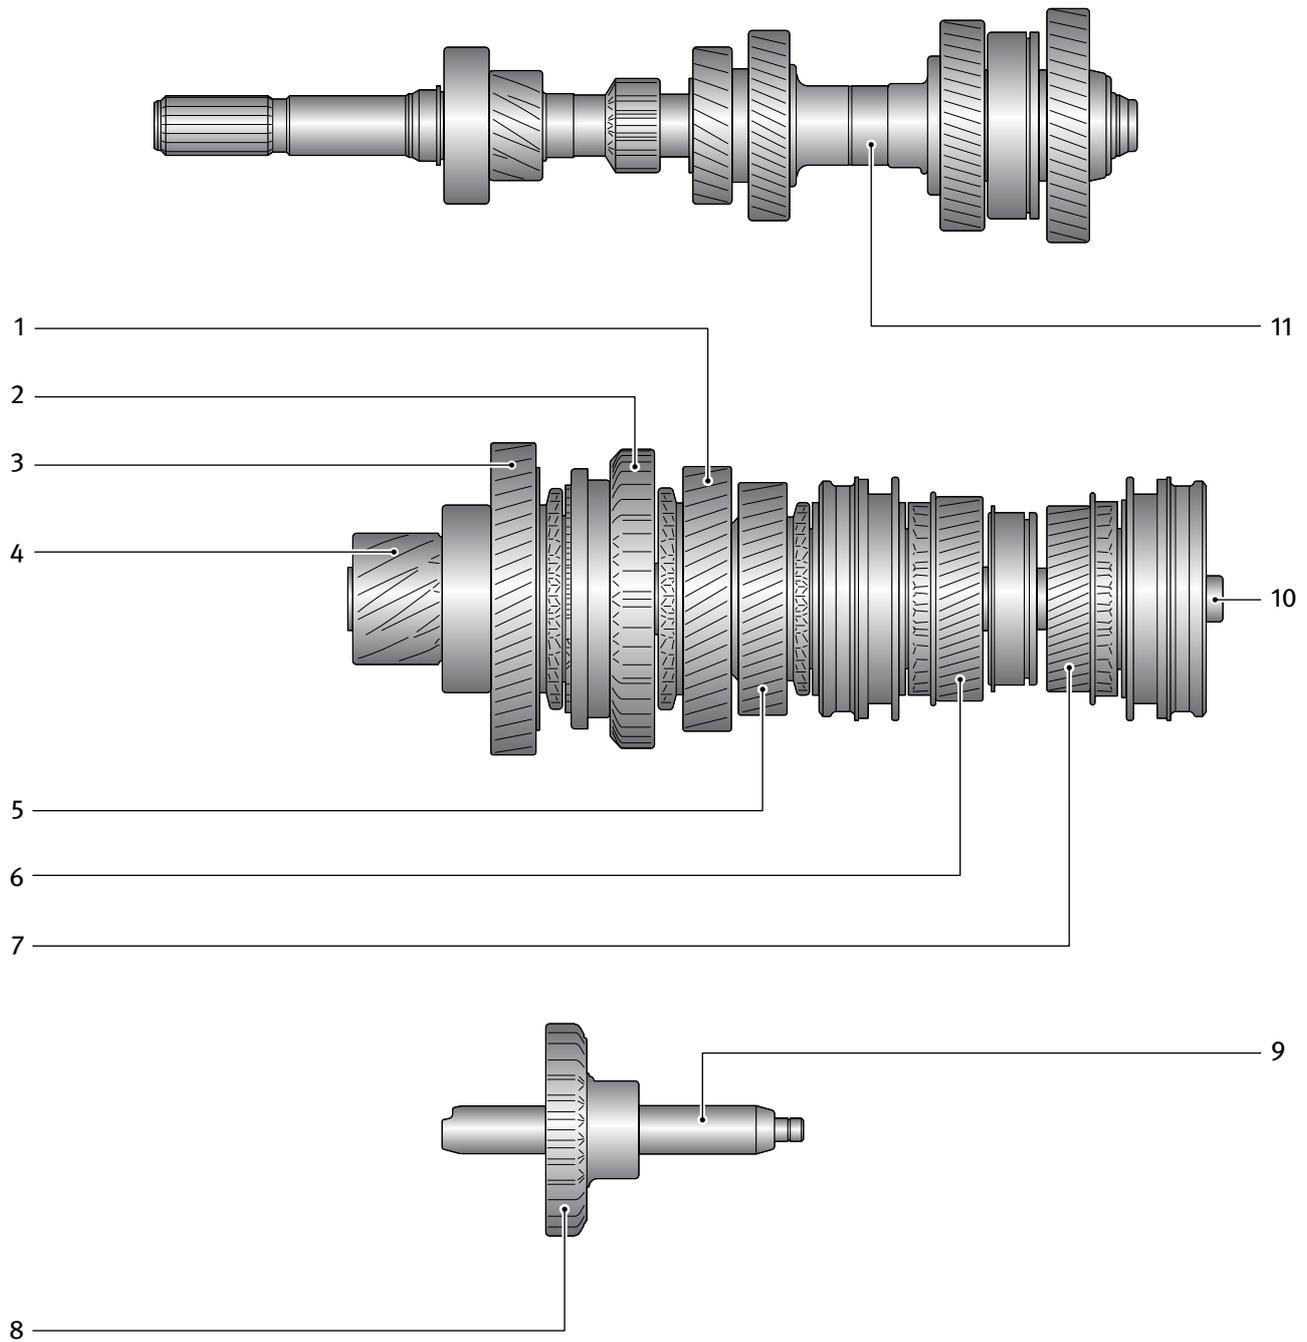


Fig. 16

- |                              |                               |
|------------------------------|-------------------------------|
| 1. 2nd gear                  | 4. Differential toothed gear  |
| 2. Reverse gear              | 5. 3rd gear                   |
| 3. 1st gear                  | 6. 4th gear                   |
| 4. Differential toothed gear | 7. 5th gear                   |
| 5. 3rd gear                  | 8. Reverse sliding gear       |
| 6. 4th gear                  | 9. Reverse sliding gear shaft |
|                              | 10. Output shaft              |
|                              | 11. Drive shaft               |

The country-specific and vehicle manufacturer-specific safety requirements and guidelines must be followed during all work!

- Drain the transmission oil and screw the drain plug back in  
Tightening torque: 33 Nm
- Remove the gearbox in accordance with the vehicle manufacturer's specifications

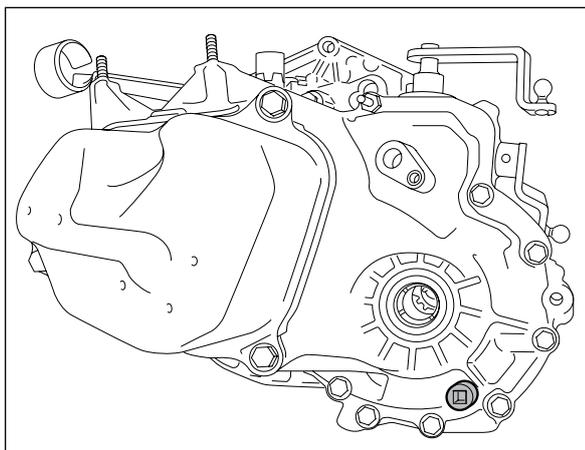


Fig. 17

- Remove bolts from the guiding sleeve
- Disassemble the guiding sleeve including the sealing ring of the input shaft
- Clean the thread in the clutch cover using a thread tap

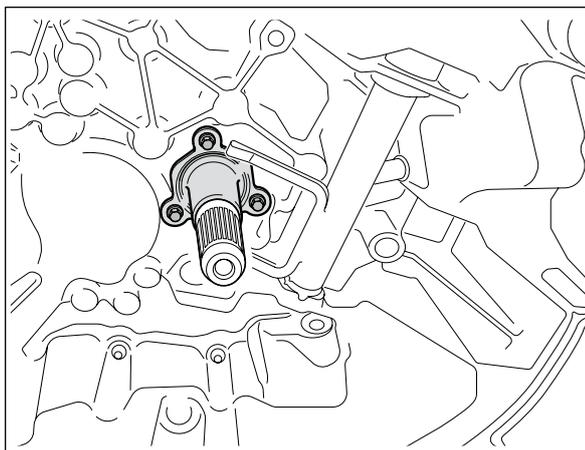


Fig. 18

- Remove reversing light switch [1] and speedometer drive [2]

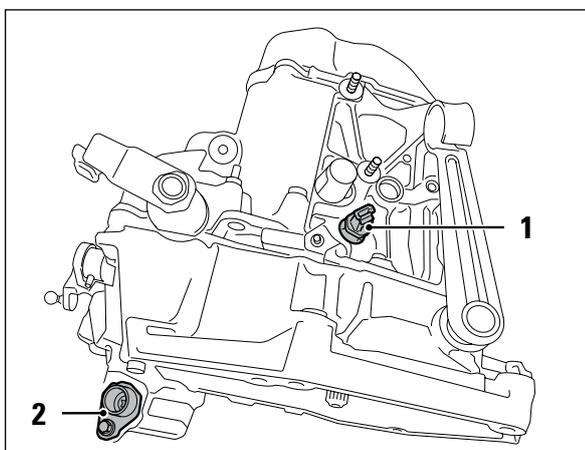


Fig. 19

- Remove transmission cover for fifth gear

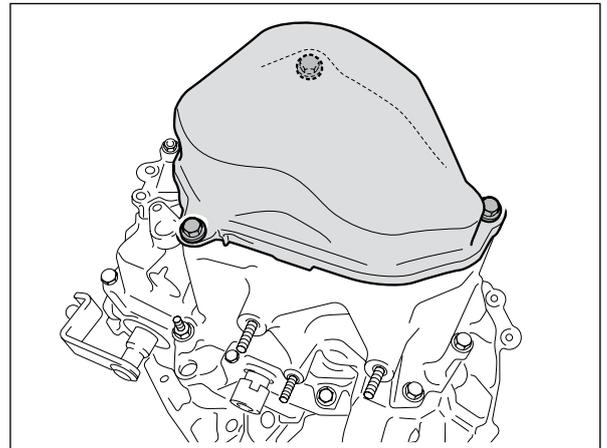


Fig. 20

- Remove the spring pin of the shift fork for fifth gear

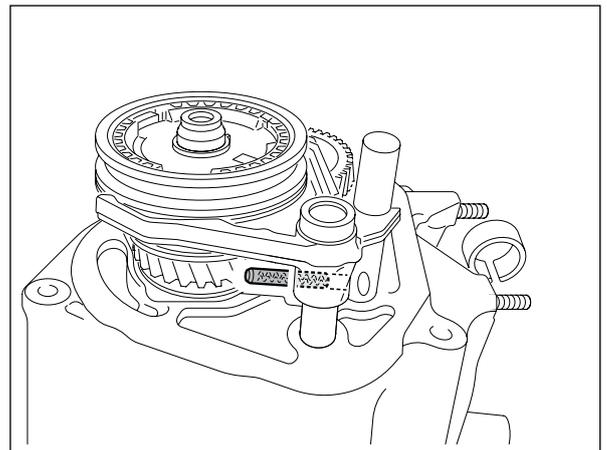


Fig. 21

- Remove snap ring [1] and support washer [2] from the synchronizer unit for fifth gear

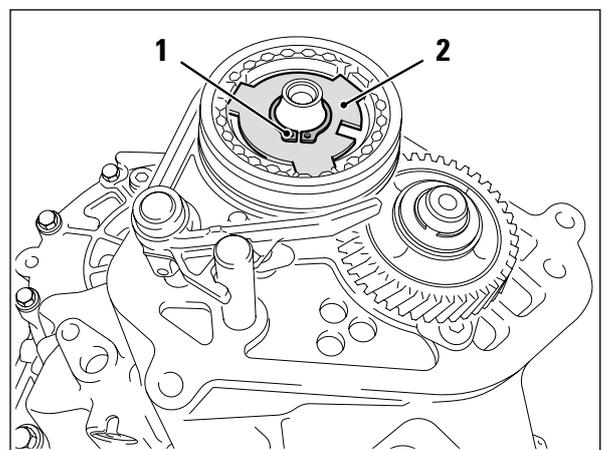


Fig. 22

- Remove synchronizer unit and fifth gear from the output shaft

**Note:**

Label the synchronizer body and selector sleeve so that they match. The two components are matched to one another. It is important to ensure that the shift fork is carried upwards to prevent the synchronizer unit from falling apart.

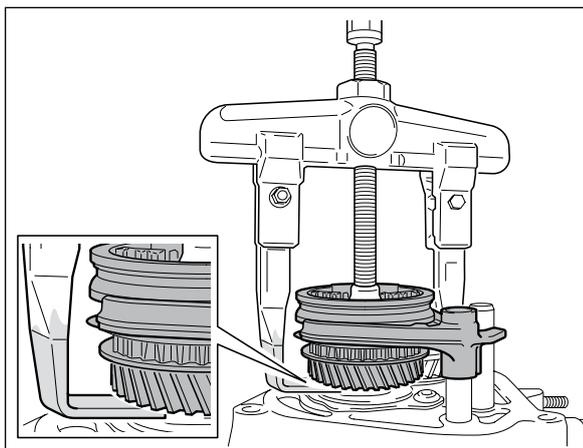


Fig. 23

- Remove the snap rings [1 and 2] from the output shaft and drive shaft and remove the spring washer [3]

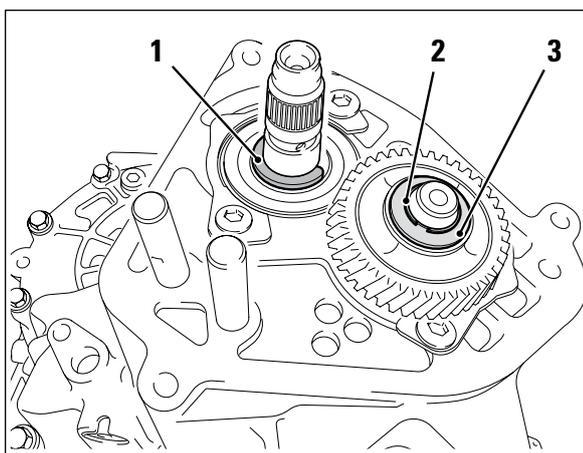


Fig. 24

- Remove the fixed gear for fifth gear

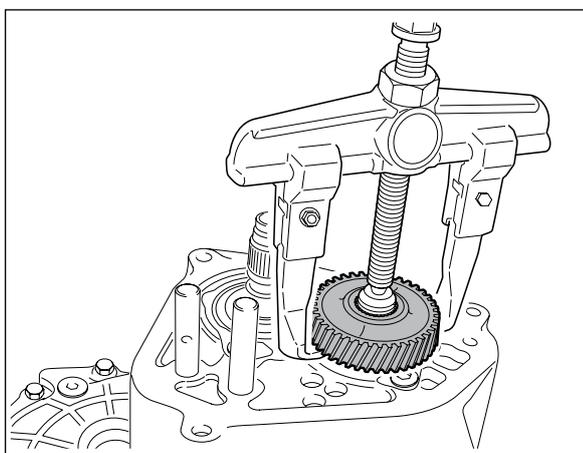


Fig. 25

- Unscrew the bolts, lift the output shaft or drive shaft and remove the bearing snap rings
- Clean the thread in the transmission housing using a thread tap

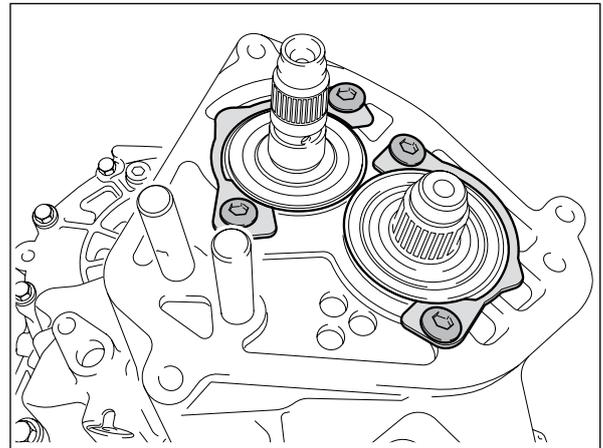


Fig. 26

- Remove bolts from the transmission housing

**Note:**  
Mark the installation position of the housing bolts.

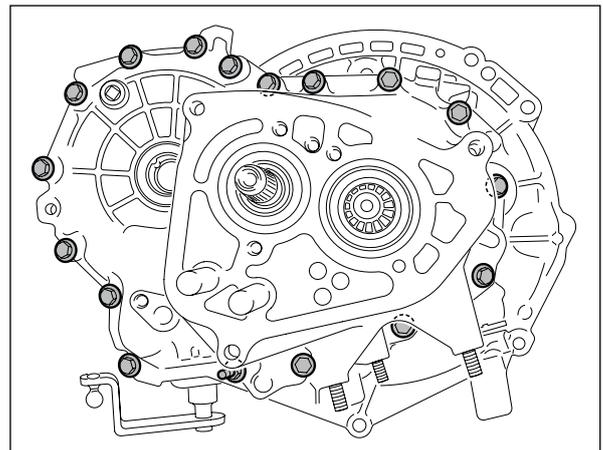


Fig. 27

- Remove the transmission housing in an upward motion

**Note:**  
Do not damage the sealing surfaces.

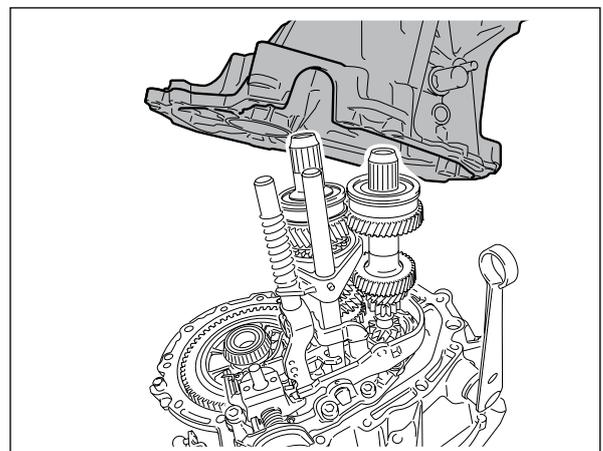


Fig. 28

- Move selector sleeves into the neutral position
- Remove the shaft of the reverse sliding gear [1]
- Remove the reverse sliding gear [2]

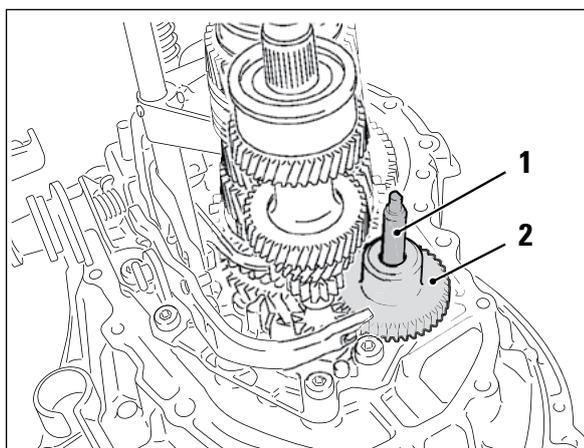


Fig. 29

- Remove the bearing pin for the reverse gear shift fork using a suitable tool

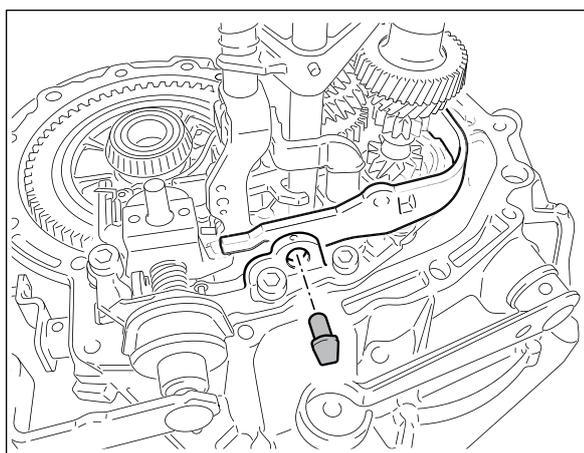


Fig. 30

- Disassemble the reverse gear shift fork
- Remove the mounting screw for the intermediate plate behind the locking key

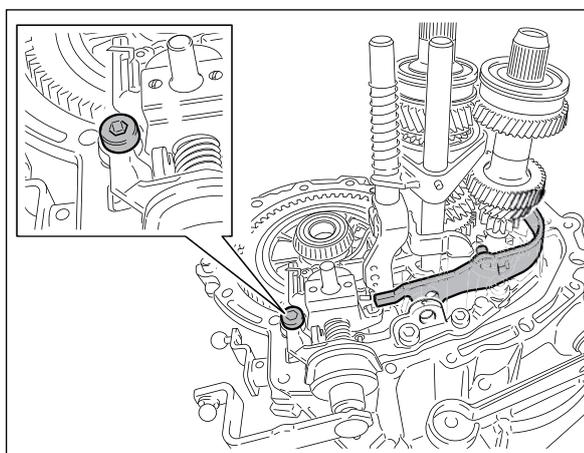


Fig. 31

- Engage second gear (pull out the front shift lever and rotate anticlockwise)
- Remove the roll pin [1] for the shift finger

**Note:**  
Retain roll pin [1].

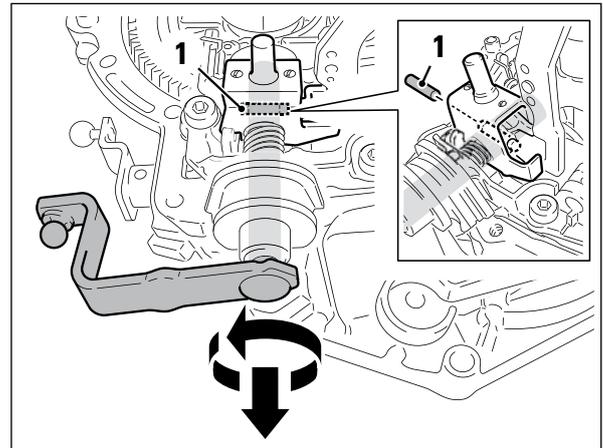


Fig. 32

- Pull out shift lever [1]
- Remove spring [2]

**Note:**  
Wear protective goggles!

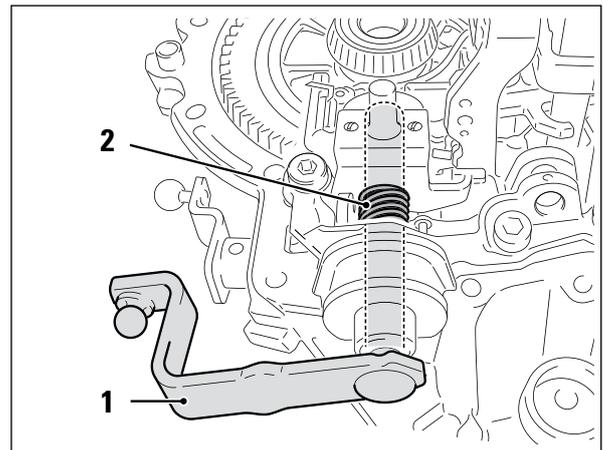


Fig. 33

- Disassemble the locking key

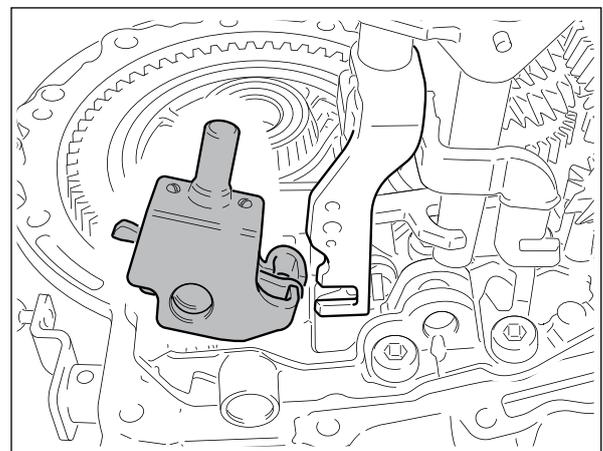


Fig. 34

- Lift the drive shaft and output shaft with shift forks and shift rods out of the clutch housing

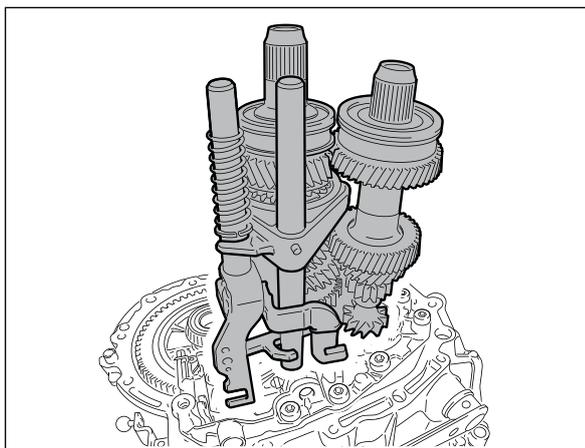


Fig. 35

- Remove bolts and lift the intermediate plate off the clutch cover
- Clean the thread in the clutch cover using a thread tap

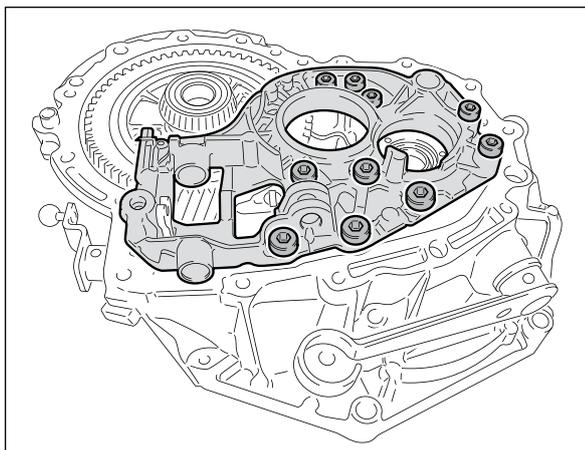


Fig. 36

- Remove and clean magnet [1]
- Disassemble locking finger [2] for the reverse gear shift fork incl. spring
- Lift out the differential [3]

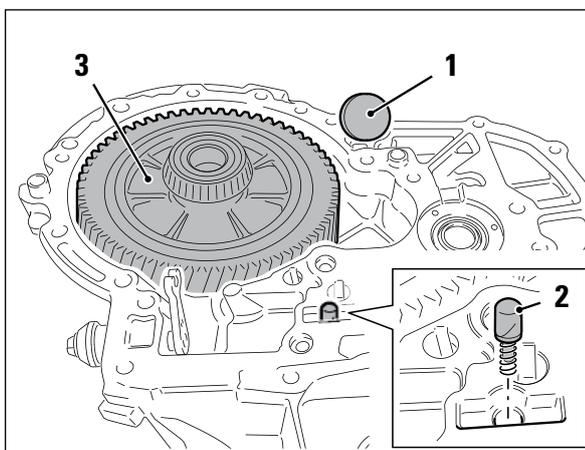


Fig. 37

- Remove the roll pin [1] of the selector lever [2] using a suitable tool
- Remove selector lever [2] and pull out shift fork shaft [3]

**Note:**  
Retain roll pin [1].

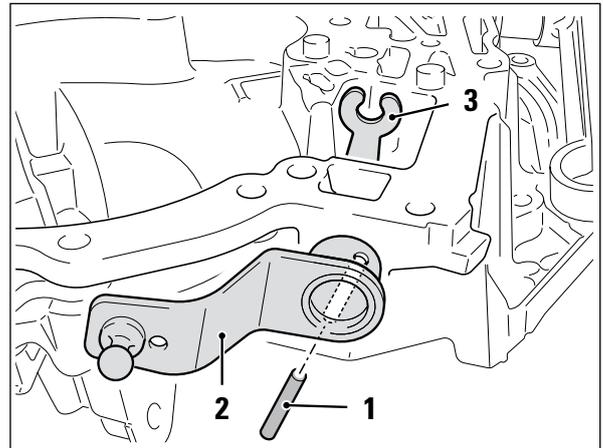


Fig. 38

- Replace rotary shaft seal [8] on the shift fork shaft

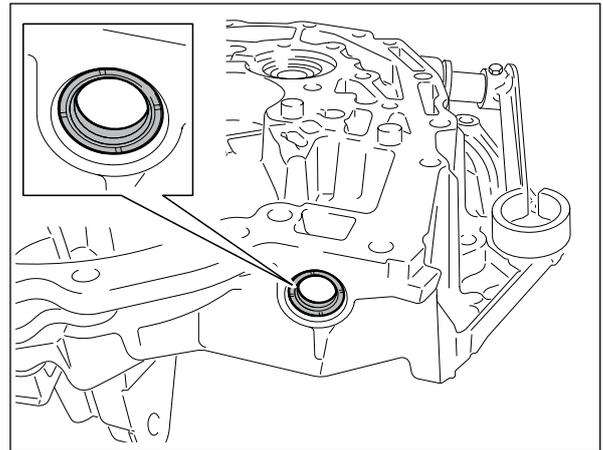


Fig. 39

- Insert shift fork shaft [3] and mount selector lever [2]
- Press in roll pin [1] using a suitable tool

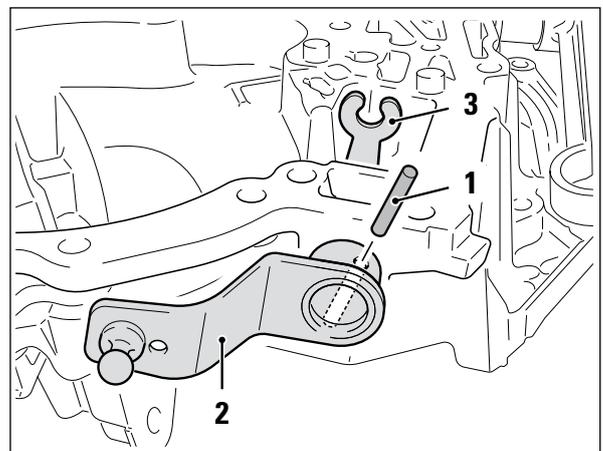


Fig. 40

- Remove the flanged shaft seal of the clutch cover

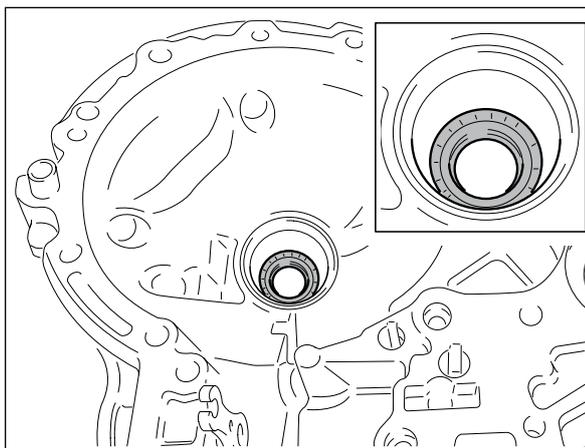


Fig. 41

- Replace the clutch cover-side bearing shell (1) for the differential bearing

**Note:**

The inner and outer ring of the tapered roller bearings are a pair (do not mix them up).

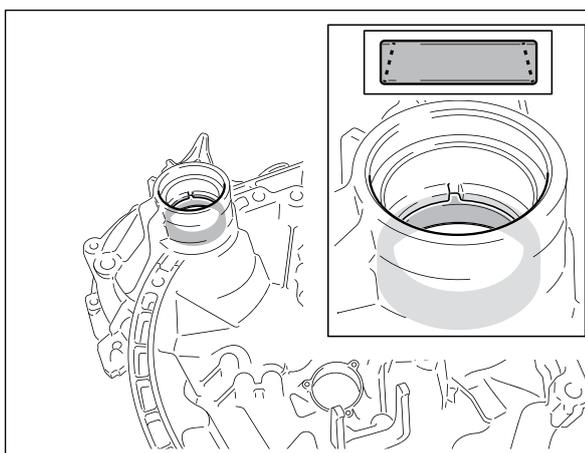


Fig. 42

- Press in the new flanged shaft seal (7) for the clutch cover

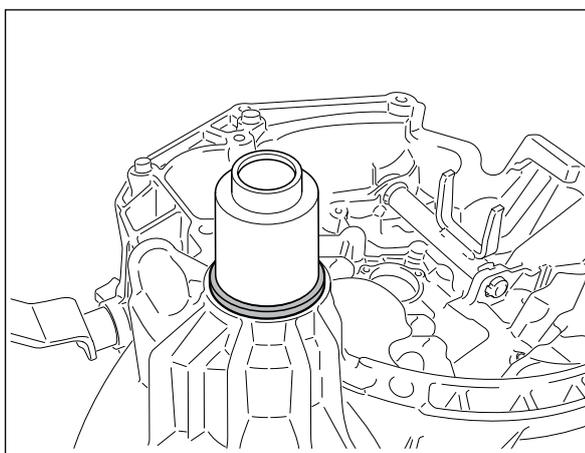


Fig. 43

- Remove flanged shaft seal for the transmission housing

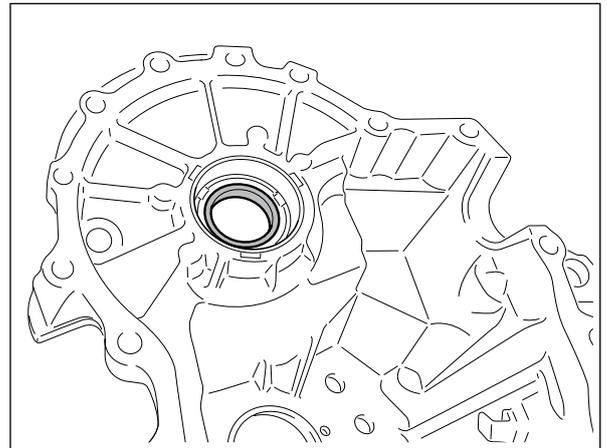


Fig. 44

- Replace the transmission housing-side bearing shell (1) for the differential bearing

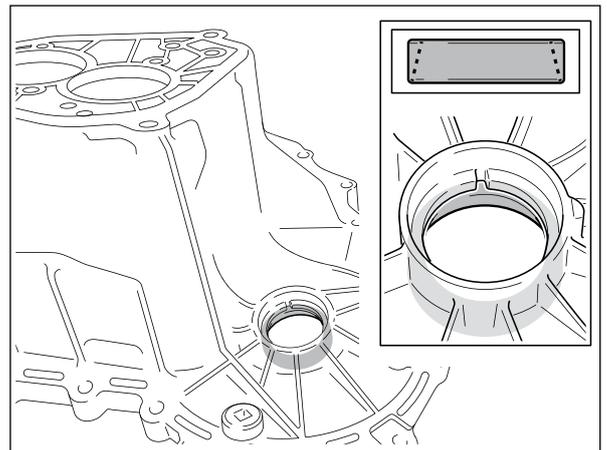


Fig. 45

- Press in the new flanged shaft seal (6) for the transmission housing

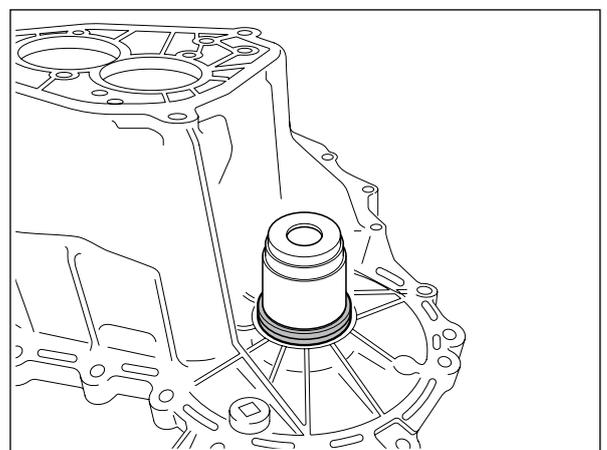


Fig. 46

- Disassemble the speedometer drive gear

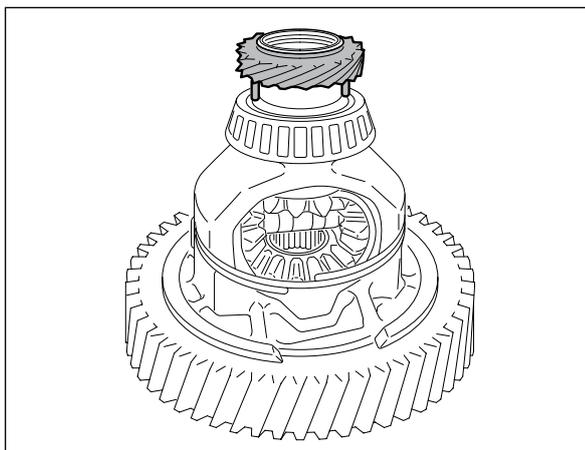


Fig. 47

- Remove both differential bearings

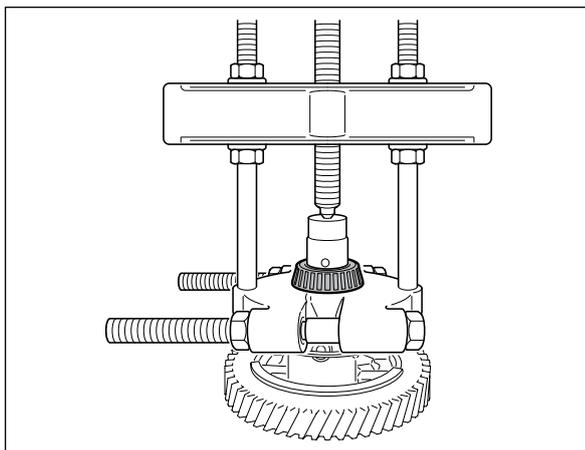


Fig. 48

- Press on the new differential bearings (1)

**Note:**

Press on the inner ring with the appropriate sleeve.

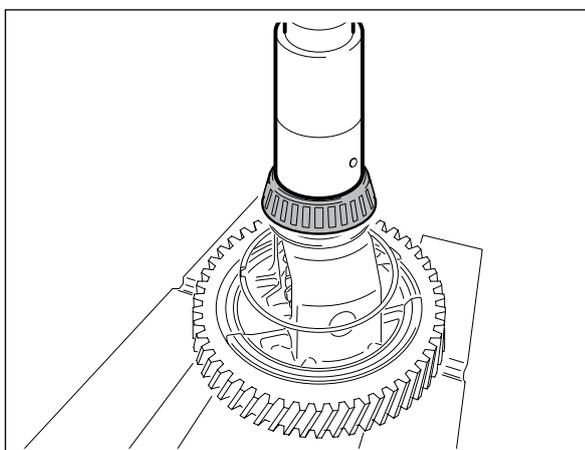


Fig. 49

- Mount the speedometer drive gear

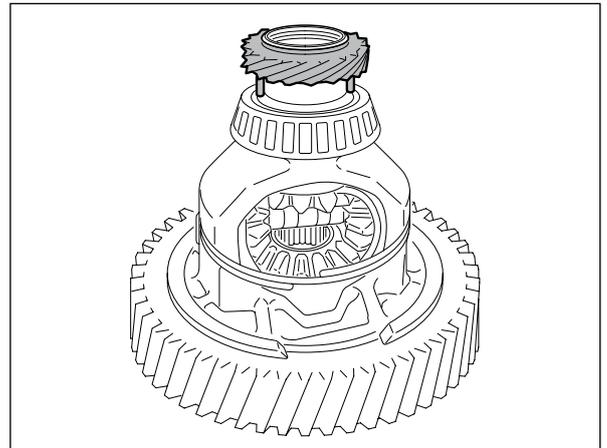


Fig. 50

- Press off the bearing of the drive shaft

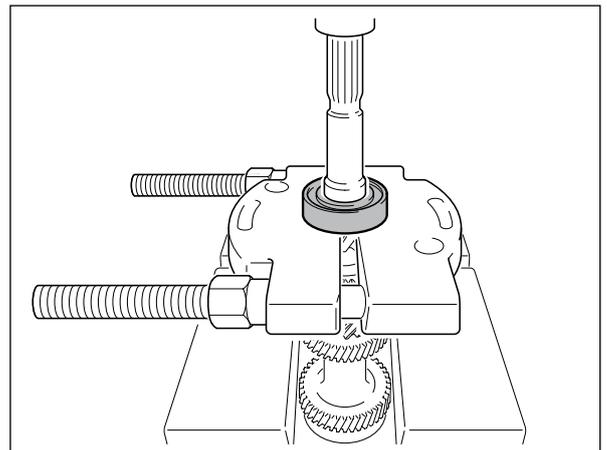


Fig. 51

- Press off the second bearing of the drive shaft

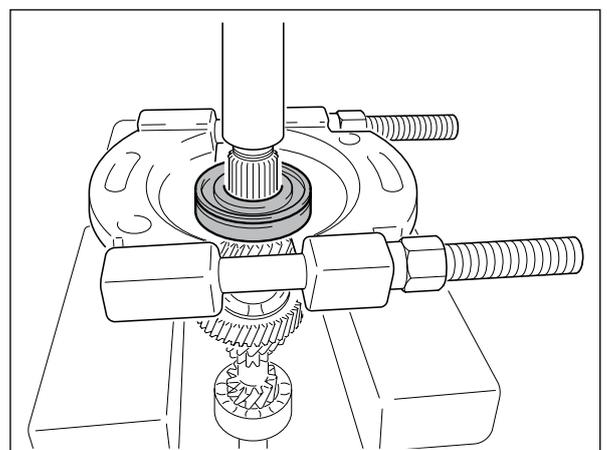


Fig. 52

- Press on the new bearing (5) of the drive shaft

**Note:**

Support the inner ring of the bearing (5) with the appropriate sleeve.

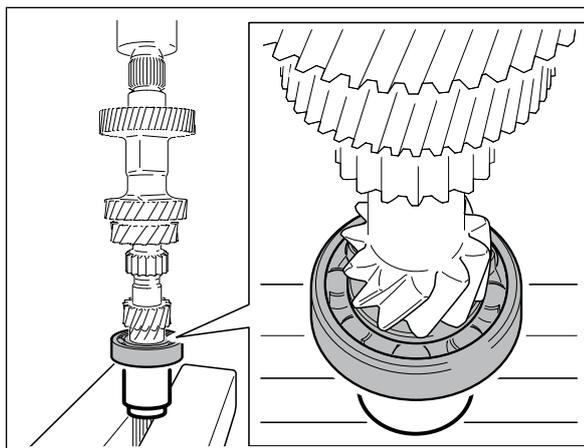


Fig. 53

- Press on the new bearing (3) of the drive shaft with the groove facing upwards

**Note:**

Press on the inner ring with a suitable sleeve.

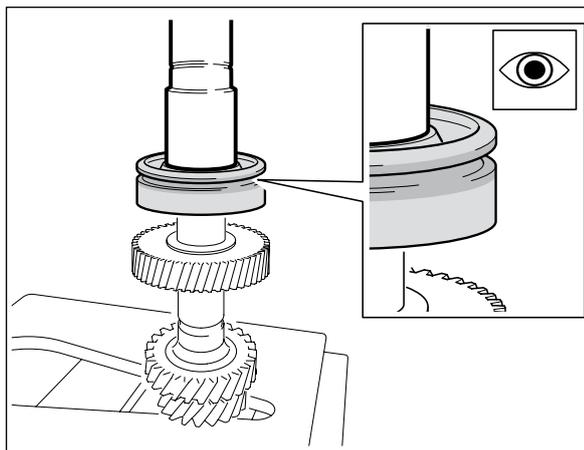


Fig. 54

- Press off the bearing of the output shaft

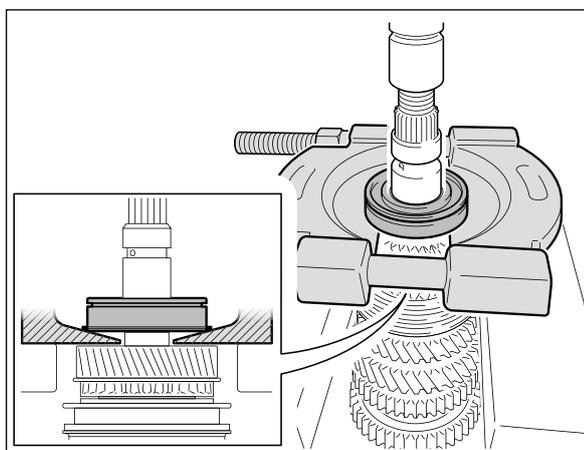


Fig. 55

- Remove washer [1], fourth gear [2], synchro ring for fourth gear [3], selector sleeve for third/fourth gear [4] and synchro ring for third gear [5] off the output shaft

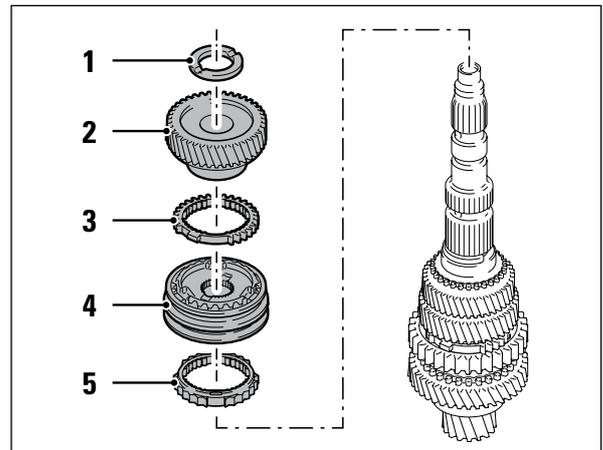


Fig. 56

- Remove snap ring [6]
- Remove third gear [7] off the output shaft

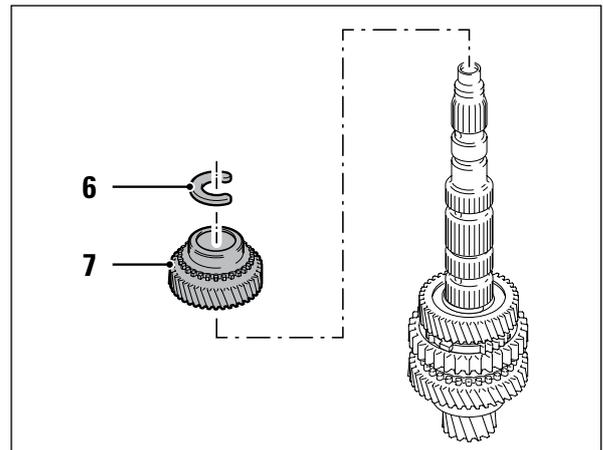


Fig. 57

- Remove snap ring [8]
- Remove second gear [9], synchro ring for second gear [10], synchronizer unit for first/second gear [11] and synchro ring for first gear [12] off the output shaft

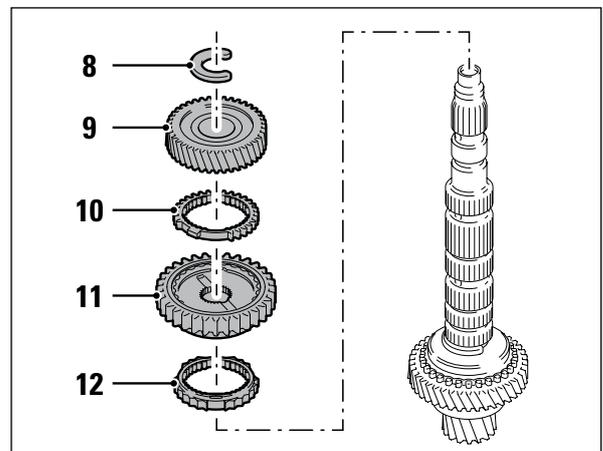


Fig. 58

- Remove snap ring [13]
- Remove first gear [14] off the output shaft
- Remove snap ring [15]

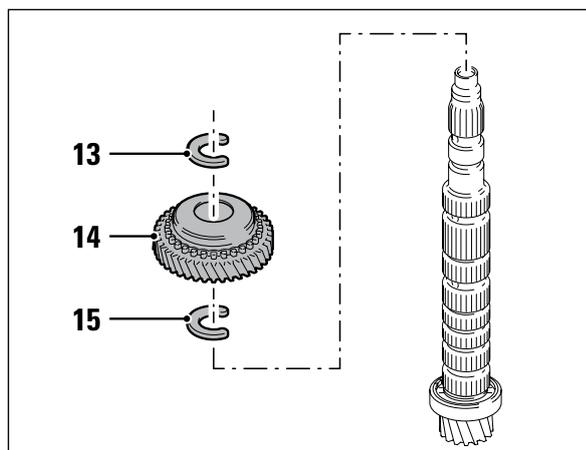


Fig. 59

- Press off the bearing of the output shaft

**Note:**

Take the installation position of the bearing into account.

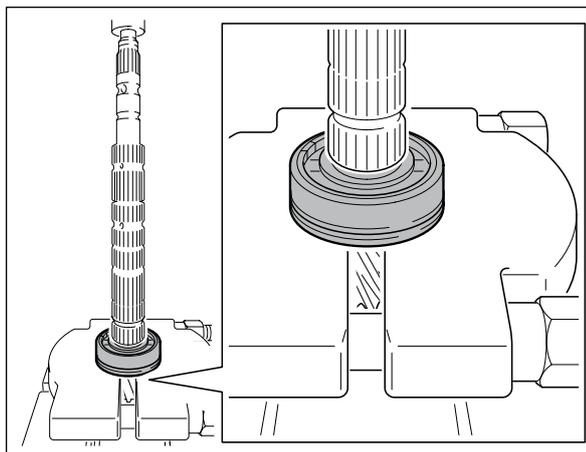


Fig. 60

- Press on the new bearing (2) of the output shaft using a suitable tool

**Note:**

Support the inner ring of the bearing (2) with the appropriate sleeve.

Do not damage the lubrication connection when press-fitting.

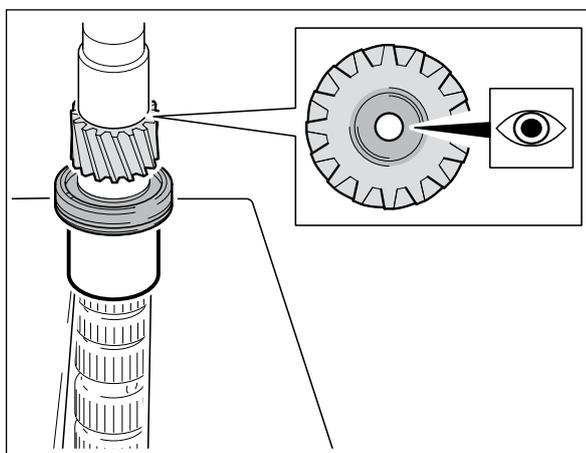


Fig. 61

- Mount snap ring [15]
- Mount first gear [14] on output shaft
- Mount snap ring [13]

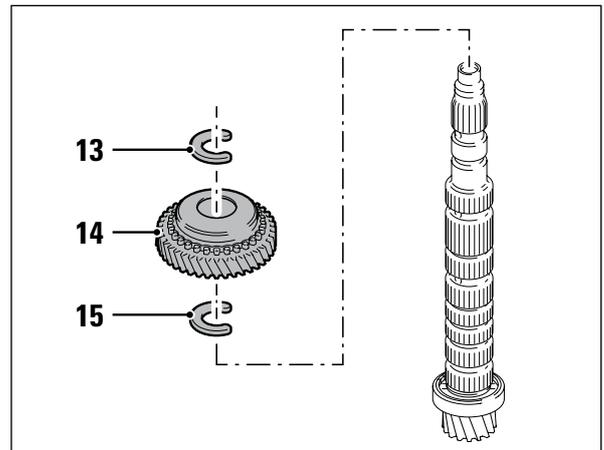


Fig. 62

- Mount synchro ring for first gear [12], synchro unit for first/second gear [11], synchro ring for second gear [10] and speed gear for second gear (9) on output shaft
- Mount snap ring [8]

**Note:**

Install synchronizer unit [11] with the groove (a) facing downwards.

Align the lugs of the synchro rings [10 and 12] in parallel to the detents of the synchronizer unit [11].

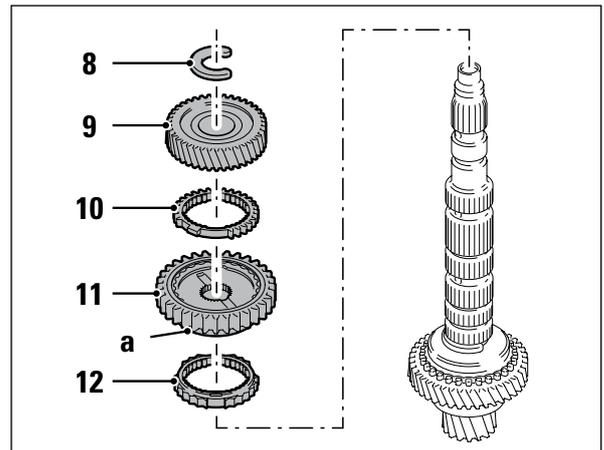


Fig. 63

- Mount third gear [7] on the output shaft
- Mount snap ring [6]

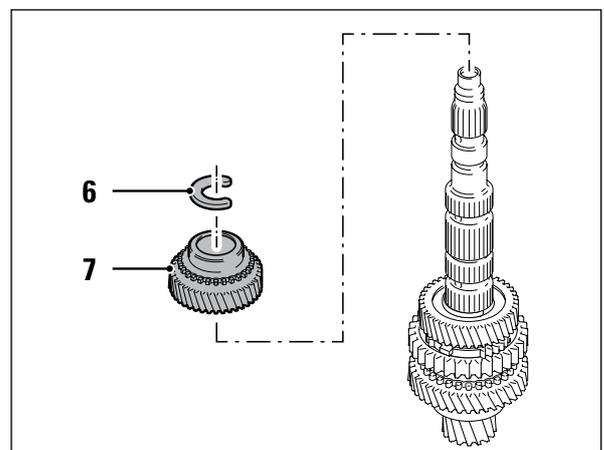


Fig. 64

- Mount synchro ring for third gear [5], synchro unit for third/fourth gear [4], synchro ring for fourth gear [3], fourth gear [2] and washer [1] on output shaft

**Note:**

Install synchronizer unit for third/fourth gear [4] with the groove (b) facing upwards.

Align the lugs of the synchro rings [3 and 5] in parallel to the detents of the synchronizer unit [4].

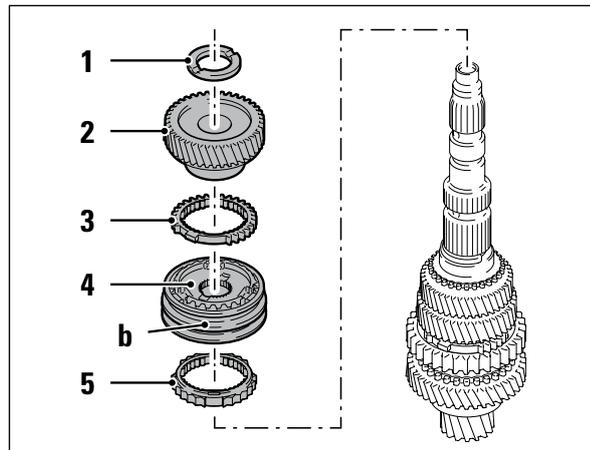


Fig. 65

- Press on the new bearing (4) of the output shaft with the groove facing upwards

**Note:**

During press-fitting, protect the lubrication connection against damage using a suitable sleeve.

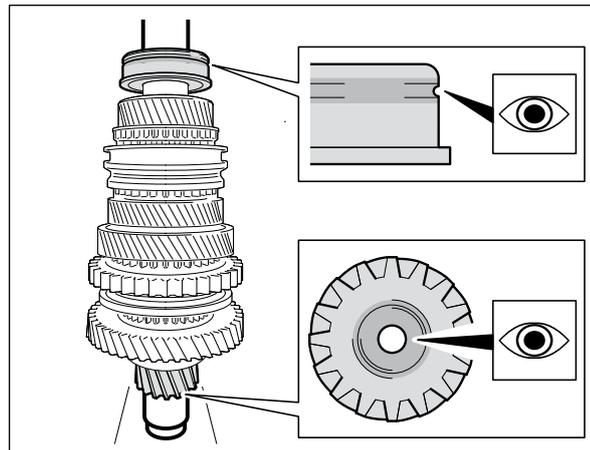


Fig. 66

- Clean sealing surfaces of the two halves of the housing
- Insert magnet [1]
- Mount detent [2] for the reverse gear shift fork incl. spring
- Insert the differential [3]

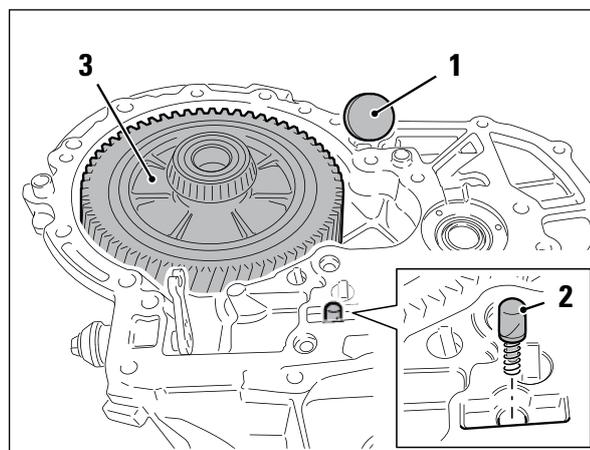


Fig. 67

- Clean the sealing surface of the intermediate plate [1]
- Apply sealant (e.g. Loctite 549) to the contact surface of the intermediate plate and the clutch cover
- Insert shift fork [2] through the hole in the intermediate plate
- Mount the intermediate plate  
Tightening torque: 50 Nm

**Note:**

Remove excess sealant from the bearing seats and the holes in the shift fork shafts after tightening the intermediate plate bolts.

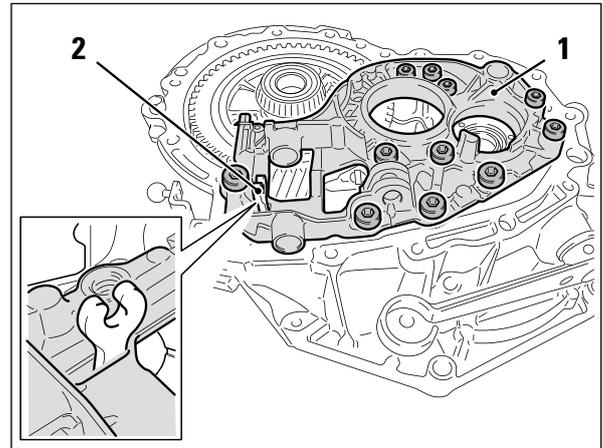


Fig. 68

- Slide the shift forks onto the selector sleeves of the synchronizer units
- Insert the drive shaft and output shaft including shifting mechanism into the transmission housing

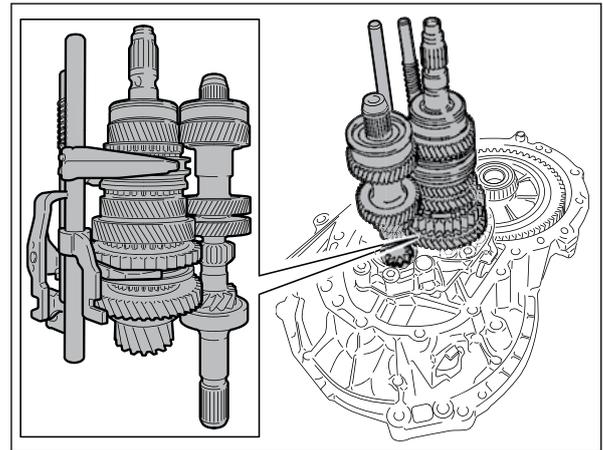


Fig. 69

- Assemble the shift finger [1] and locking clamp [2]

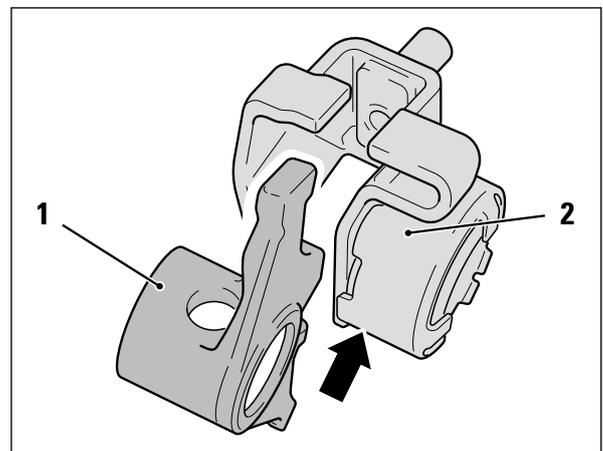


Fig. 70

- Install the shift finger and locking clamp

**Note:**

The fingers of the locking clamp must engage in the shifting claws of the shift rods.

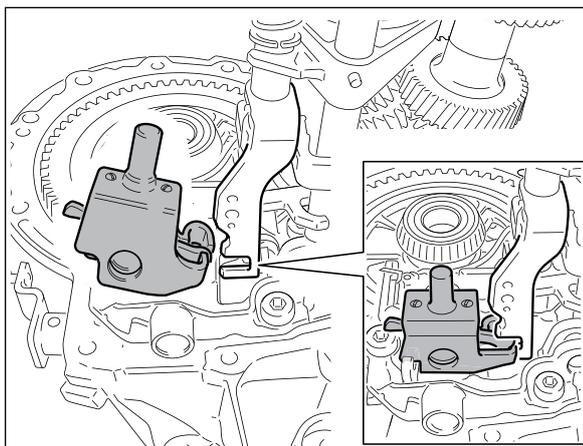


Fig. 71

- Insert locking clamp [1] into shift fork [2]

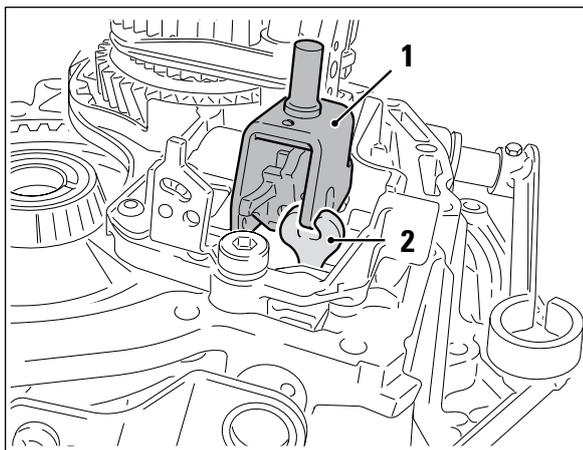


Fig. 72

- Insert spring for locking key

**Note:**

Wear protective goggles!

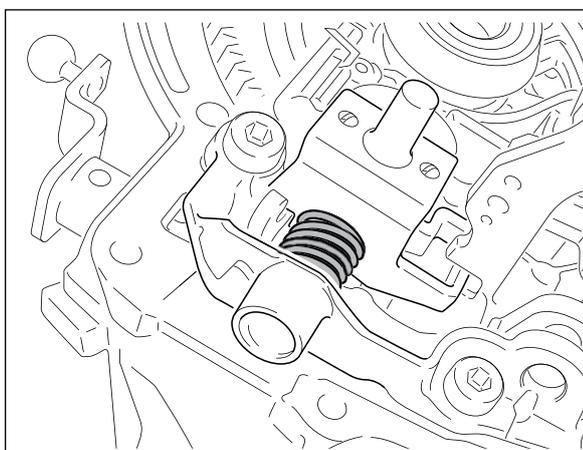


Fig. 73

- Mount selector shaft [1] with new shaft seal [2] (13)

**Note:**

Insert selector shaft until the dowel pin holes [3] of the shift finger and selector shaft are aligned.

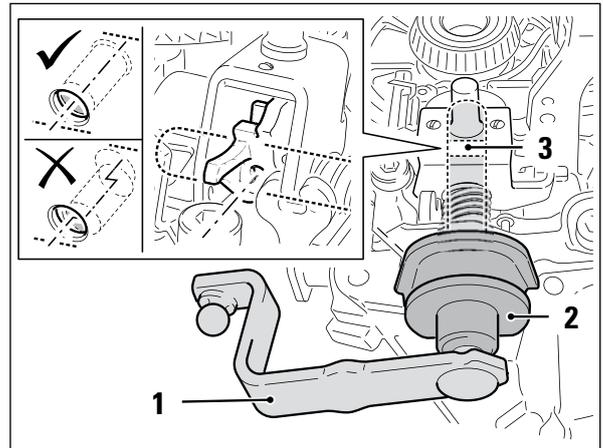


Fig. 74

- Connect the shift finger and selector shaft using the roll pin

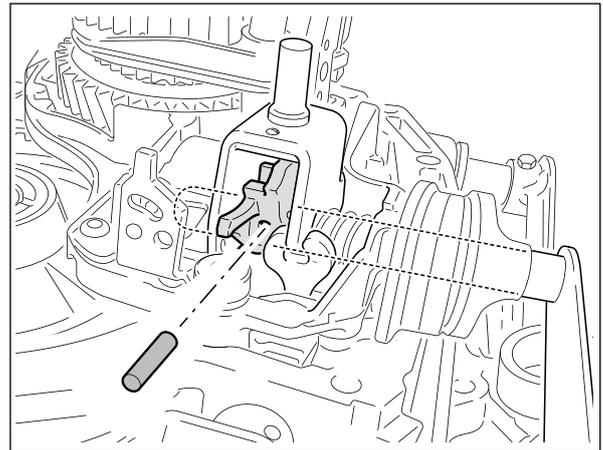


Fig. 75

- Mount the shift fork for reverse gear

**Note:**

Make sure that the reverse gear shift fork engages in the shift rod.

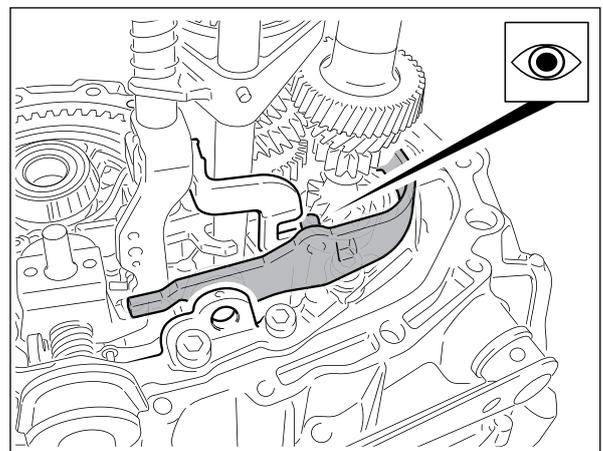


Fig. 76

- Install the bearing pin of the shift fork for reverse gear

**Note:**

Release the bearing pin by pressing on the shift fork.

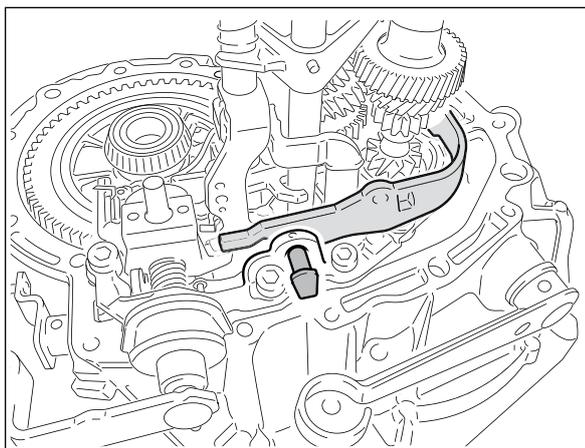


Fig. 77

- Insert reverse sliding gear [1]
- Insert the shaft for the reverse sliding gear [2]

**Note:**

Rotate the shaft of the reverse sliding gear until the lug (a) engages in the mounting slot of the housing.

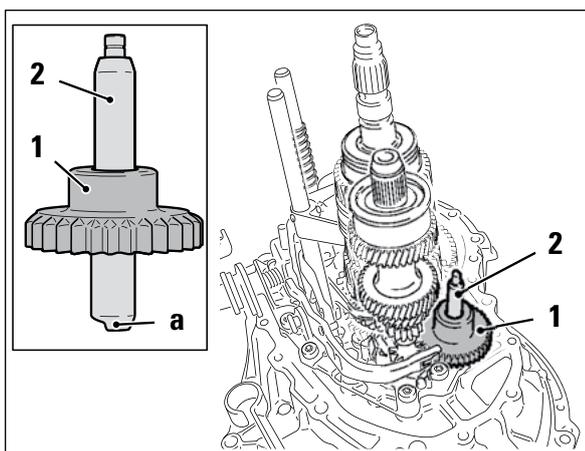


Fig. 78

**Note:**

For transmissions with reverse gear lock, make sure that the snap ring [1] and the spring [2] for reverse gear are present on the shift rod for first/second gear.

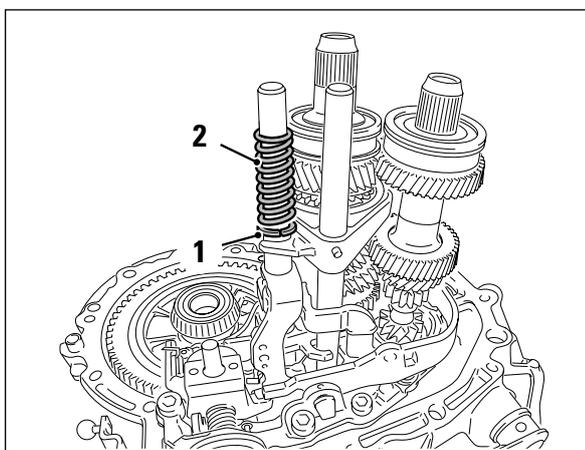


Fig. 79

- Align the seal [2] of the selector shaft
- Apply sealant (e.g. Loctite SI5135) evenly on the sealing surface of the clutch cover
- Position clutch control lever [1] vertically
- Attach the transmission housing

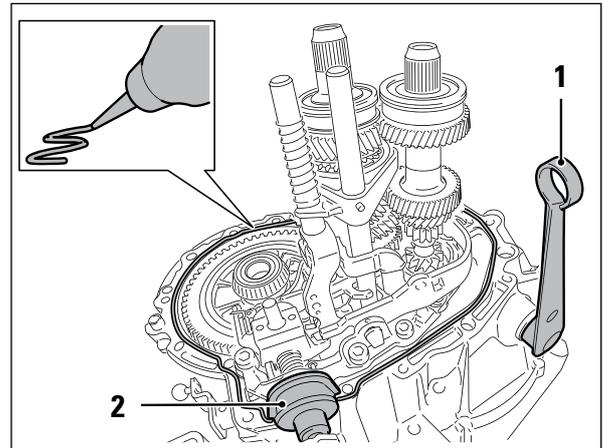


Fig. 80

- Insert housing bolts in accordance with the previous markings and tighten them evenly in a criss-cross pattern. Tightening torque: 23 Nm

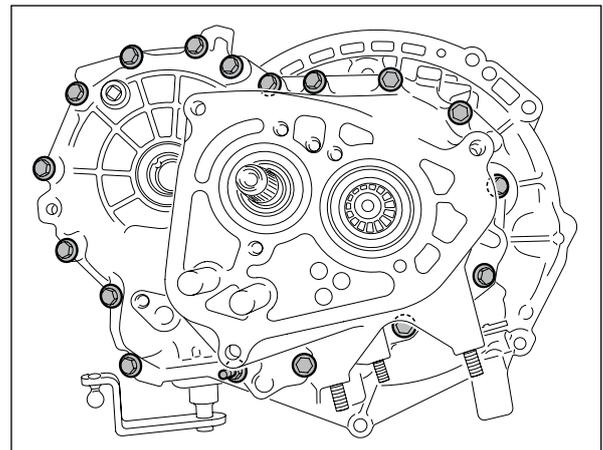


Fig. 81

- Insert the two bearing snap rings with the bevel (a) facing upwards
- Install the bolts of the bearing snap rings with thread-locking compound  
Tightening torque: 18 Nm

**Note:**

To assist with installation of the bearing snap rings, lift the shafts slightly.

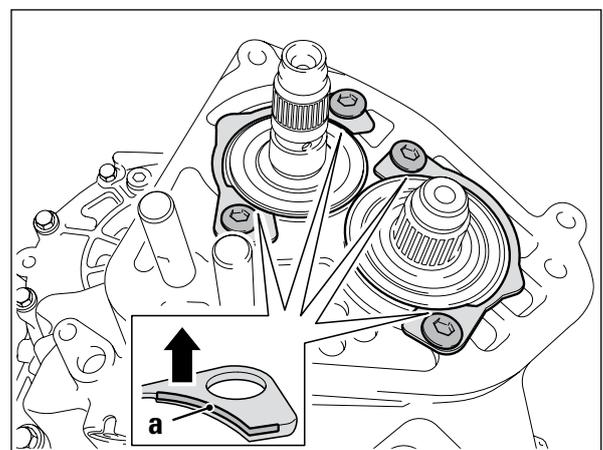


Fig. 82

- Mount the fixed gear for fifth gear

**Note:**

The high collar of the fixed gear must be facing upwards during assembly.

When press-fitting the gear wheel, the input shaft must be supported.

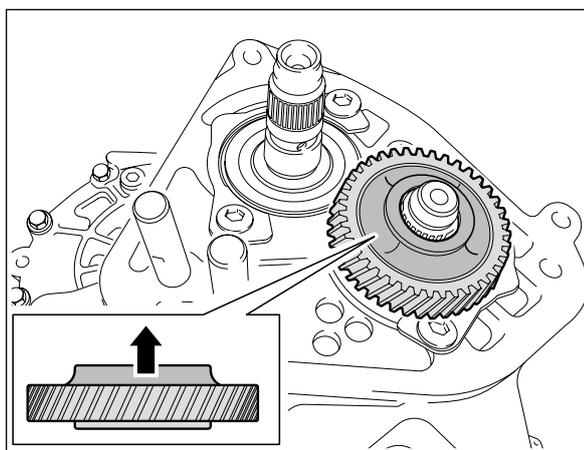


Fig. 83

- Insert spring washer [2] and new snap ring [1] (10)

**Note:**

Press the snap ring down firmly against the spring force of the washer with a suitable sleeve until it engages in the groove.

If necessary, use tongue-and-groove pliers to press further.

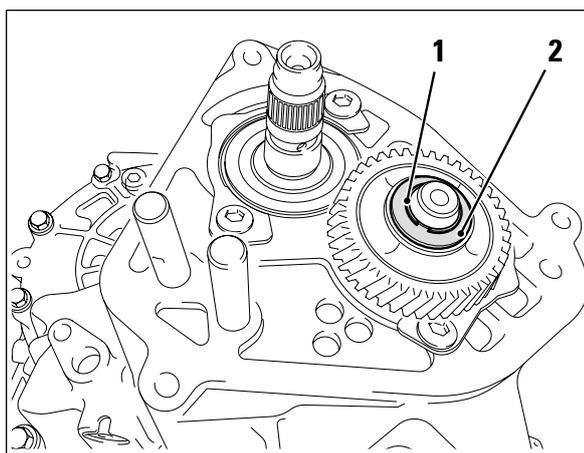


Fig. 84

- Mount the snap ring on the output shaft

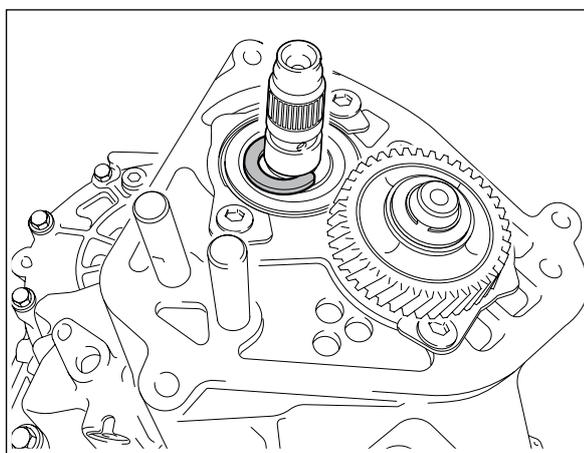


Fig. 85

- Mount synchronizer unit for fifth gear [1] together with the shift fork [2]

**Note:**

During installation, make sure that the shift fork [2] is pressed down evenly to prevent the synchronizer unit (balls, springs and detents) from falling apart.

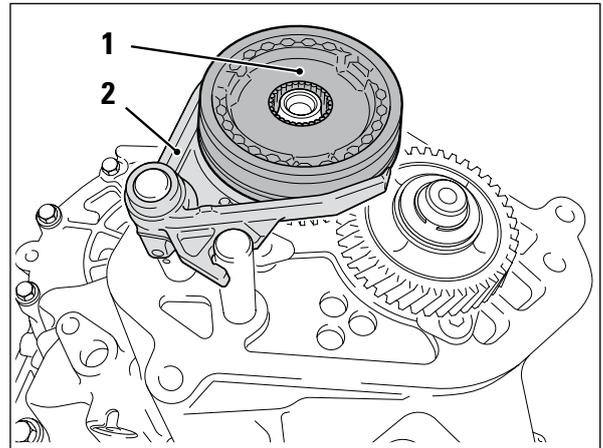


Fig. 86

- Mount support washer [2] and new snap ring [1] (11)

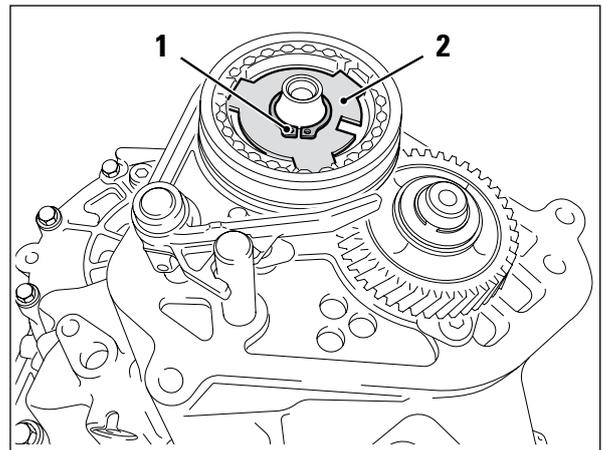


Fig. 87

- Secure shift fork for fifth gear with a new spring pin (12)

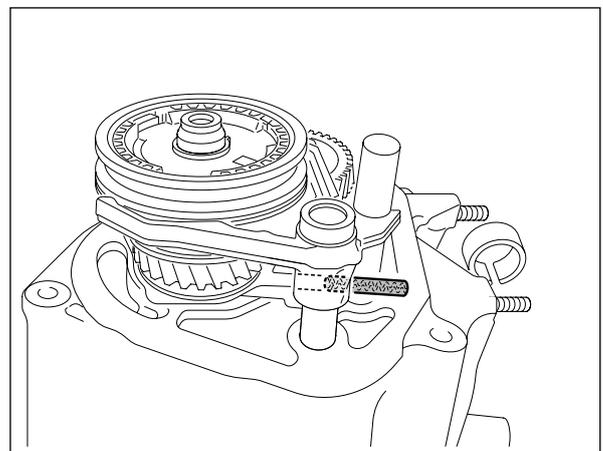


Fig. 88

- Clean the sealing surface of the transmission cover
- Replace the seal (15) of the transmission cover

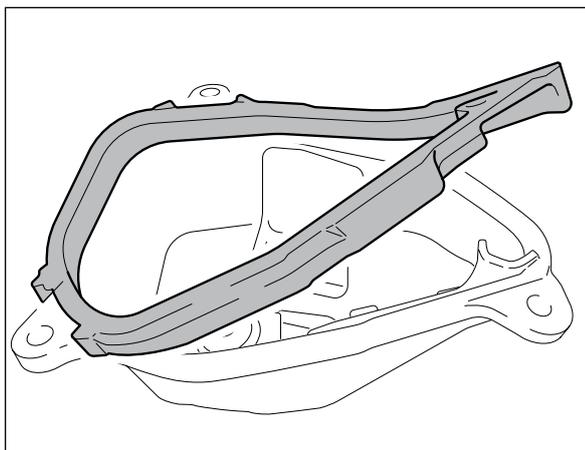


Fig. 89

- Clean the sealing surface of the transmission housing
  - Mount the cover for the transmission housing and tighten the bolts
- Tightening torque 22 Nm

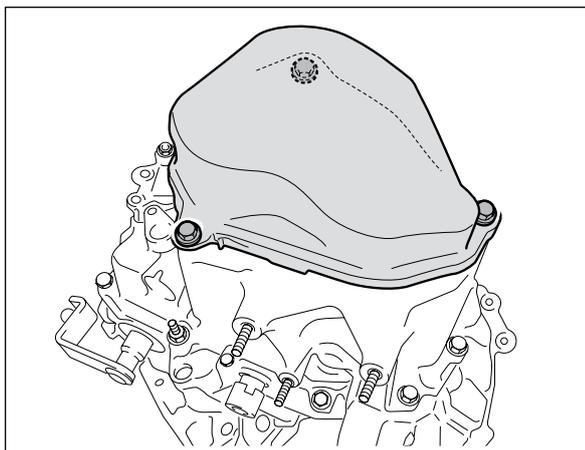


Fig. 90

- Mount the new guiding sleeve (14) incl. flanged shaft seal and tighten the bolts
- Tightening torque: 10 Nm

**Note:**

The three mounting bolts protrude into the transmission housing. Apply sealant (e.g. Loctite 243) to the mounting bolts before assembly.

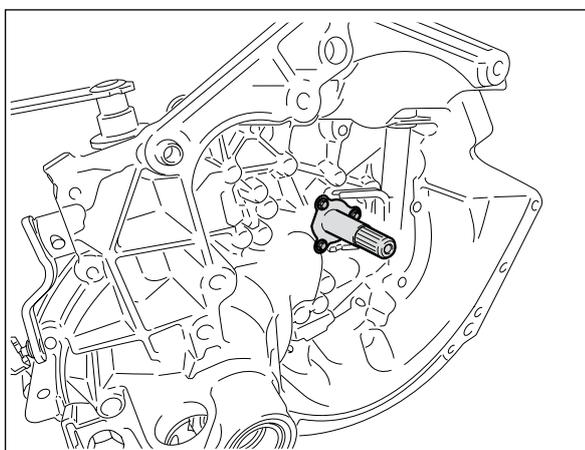


Fig. 91

- Install reversing light switch [1]  
Tightening torque: 25 Nm
- Replace the sealing ring (9) of the speedometer shaft [2] and then mount the tachometer shaft  
Tightening torque: 10 Nm

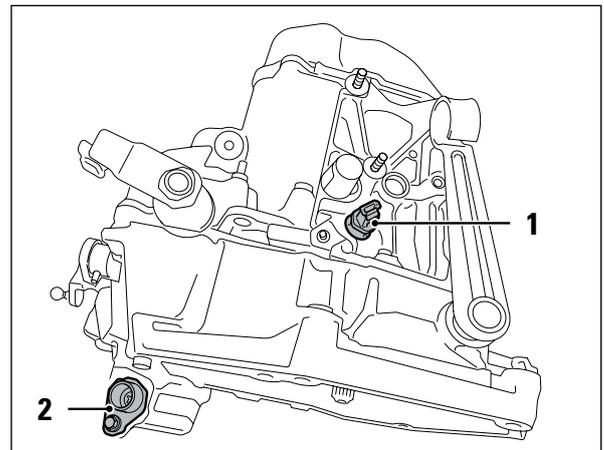


Fig. 92

- Remove the end cover from the breather hole
- Fill the empty transmission via the breather hole according to the vehicle manufacturer's specifications
- Mount the end cover on the breather hole

**Note:**

The vehicle manufacturer recommends  
ESSO 75W80 EZL 848 or  
TOTAL 75W80 H 6965.

- Install transmission according to vehicle manufacturer's specifications

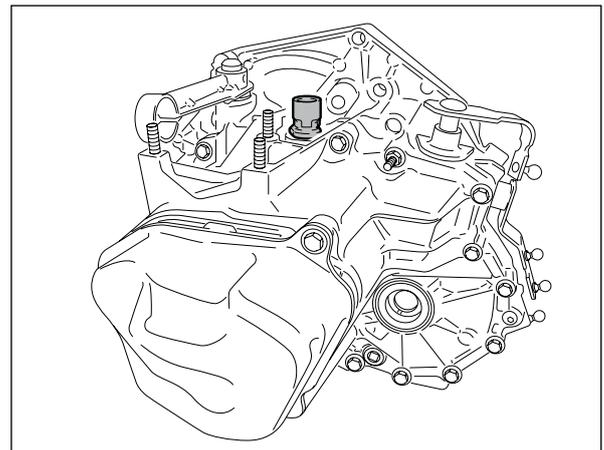


Fig. 93







