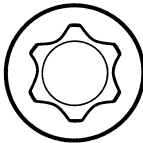


Anziehvorschrift für Zylinderkopf		170.050	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		PSA	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
330.060 M11x1,5x128			
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤	15 Nm 50 Nm 20 Nm 270°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 2,2 Ltr. / 116 kw / 158 PS / 4 Zyl. Mot. EW12J4 406, 407, 607, 807 C8			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*170.050*	