

Anziehvorschrift für Zylinderkopf		745.860	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse		KHD Deutz		
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑧ ⑥ ④ ⑤ ⑨ ⑩ ③ ① ② ⑦				
Anziehen/ Tightening/ Serrage/ Apriete		30 Nm 80 Nm 160 Nm 120°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
92,5 Ø. 1,55 mm ÷, 2 Kerben/Notches/Encoches/ Muecas				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*745.860*	