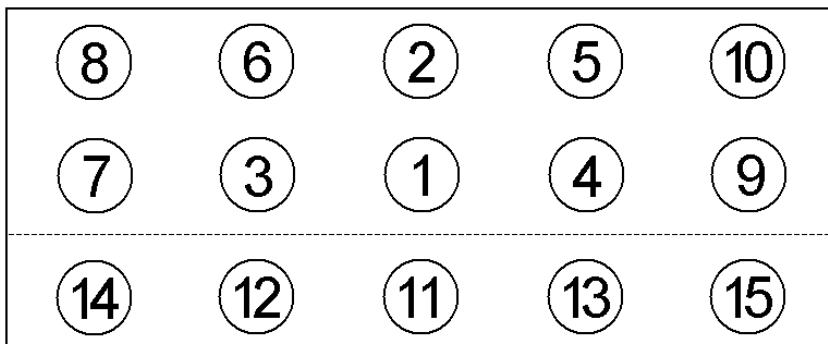


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****986.381**passend für / suitable for
adaptable à / adaptable a**Fiat****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

760.510

M 12x1,25x134

Anziehen/
Tightening/
Serrage/
Apriete

M 12
 50 Nm
 100 Nm
 > 90°
 > 90°

M 8
 30 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

∅: 83 mm; ÷: 1,75 mm

Mot: AR 33601, AR 67501

146.B2.000, 146.D7.000, 149.A1.000,
 149.B1.000, 149.B3.000, 149.B4.000,
 149.B4.046, 160.A6.000, 160.A6.046,
 160.A7.000, 160.B6.046, 160.D1.000,
 176.A3.000, 176.A5.000, 176.B3.000,

Elring-Serviceteam

Fon +49 7123 724 799
 Fax +49 7123 724 798
service@elring.de

24/11/12

986.381