

**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****389.440**passend für / suitable for  
adaptable à / adaptable a**Fiat / Iveco****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo464.390  
M 11/M 14Anziehen/  
Tightening/  
Serrage/  
Apriete

- ⊙ 50 Nm
- Pos. 1 - 6 100 Nm
- Pos. 1 - 6 90°
- Pos. 7 - 10 60°
- Pos. 1 - 6 90°
- Pos. 7 - 10 60°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 1,20 mm

Ducato 11, Ducato 15, Ducato Maxi 04.2002&gt;

Daily 29 L 10, 35 C/S 10, 50 C 12 05.2002&gt;

Mot. F1AE0481, F1AE0481C

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

**\*389.440\***