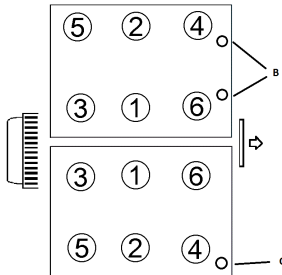


Anziehvorschrift für Zylinderkopf		233.660	passend für / suitable for adaptable à / adaptable a		Das Original
Tightening Instructions for Cylinder Head					
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
Anziehen/ Tightening/ Serrage/ Apriete					
* 60 Nm loosen 360° 20 Nm 60 Nm ➤ 90° ➤ 90° Screw B: 18 Nm Screw C: 6 Nm					
Zeichenerklärung / Explanations / Explication / Explicacion					
✳	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
2.0L Diesel					
Ø: 86,8 mm / $\frac{1}{8}$: 0,95 mm					
Size: A					
Mot.: EE20Z					
assembly position: left side					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*233.660*		