


Cylinder Head Tightening Instructions **HG1119B**



	1	2	3	4	5	6
Reference	HG1119	HG1119A	HG1119B			
Piston	0.020-0.100	0.101-0.200	0.201-0.295			

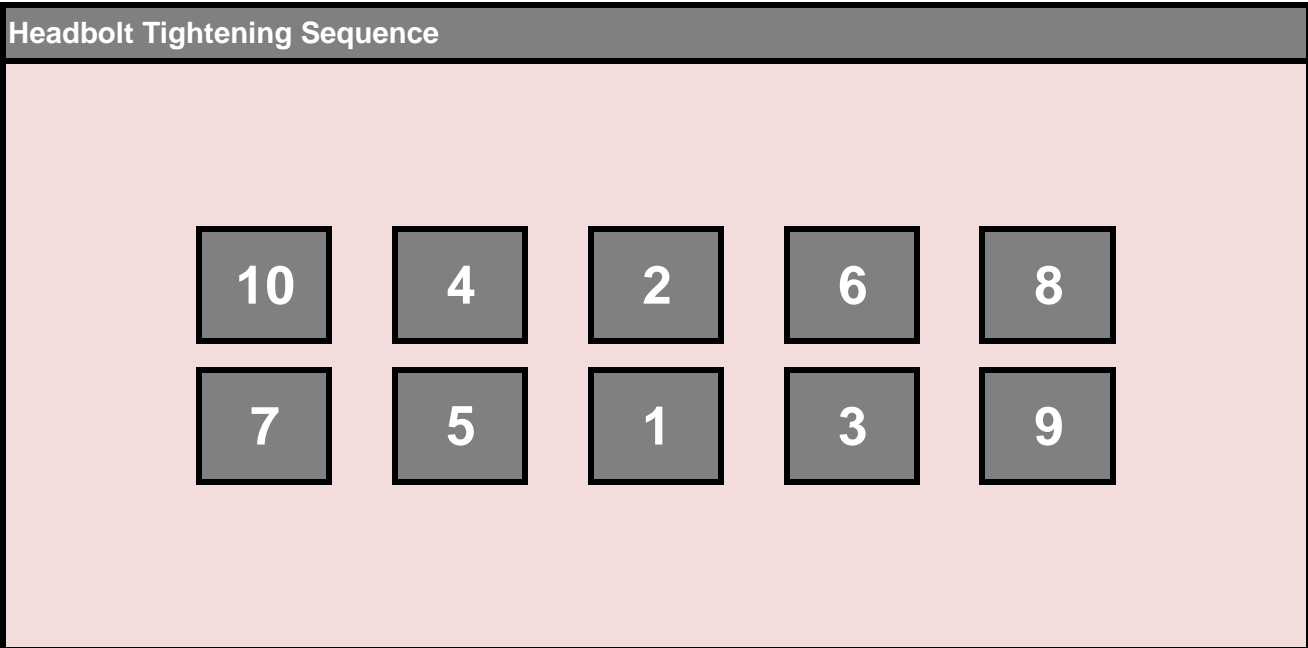

Fitment Procedure

	Stage 1	Stage 2	Stage 3	Stage 4	Stage 5	Stage 6	Stage 7	Stage 8	Retighten?
Bolt Type 1									
Kilos	3 Kpm	6.5 Kpm	-90°+6.5 Kpm	+90°	+90°	+90°			
Pounds	22 lbft	47 lbft	-90°+47 lbft	+90°	+90°	+90°			
Newton M's	29.4 Nm	63.7 Nm	-90°+63.7Nm	+90°	+90°	+90°			
Bolt Type 2									
Kilos									
Pounds									
Newton M's									
Bolt Type 3									
Kilos									
Pounds									
Newton M's									
Bolt Type 4									
Kilos									
Pounds									
Newton M's									

Fitment Key	Description of Required Procedure
-/+ X°	Loosen or tighten the head bolt by the 'X'-value specified in the stage. Follow indicated tightening order.
<>	Run the engine until it reaches working temperature. Let the engine cool with the bonnet open for a minimum of four hours. Remove the expansion tank cap. Should retightening be required, loosen by 90° and then retighten observing the tightening procedure above.
Retighten?	If required, should be performed between 620-930 Miles (1000-1500 Km).

