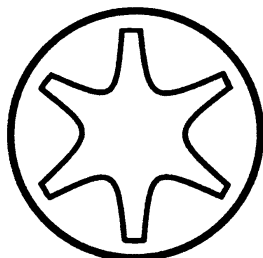
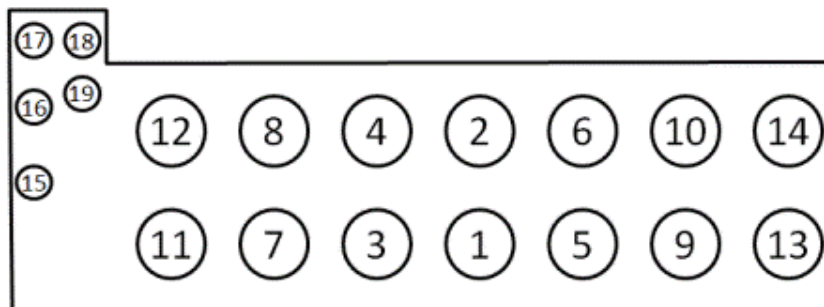


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****298.551**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo794.480
M 11x1,5x188Anziehen/
Tightening/
Serrage/
Apriete● Pos. 1-14 (M11)
50 Nm
➤ 180°
➤ 180°Pos. 15-19 (M8)
19 Nm**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot.: B58 B30 A 240-265 KW

BMW: 3´ F30/F31 340i
4´ F32/F33/F36 440i
7´ G11/G12 740i

3,0 Ltr

Elring-ServiceteamFon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

23/11/14

298.551