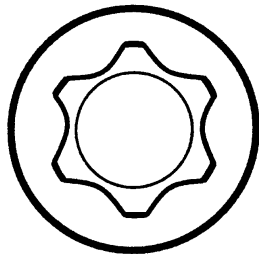
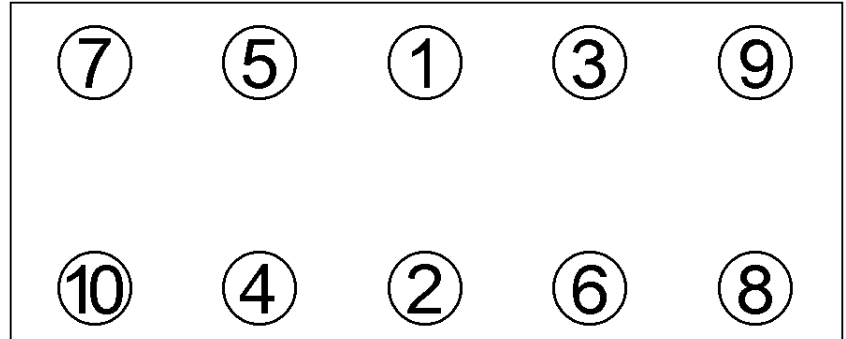


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****217.580**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornilloN63  
M 11x1,5x175Anziehen/  
Tightening/  
Serrage/  
AprieteZKS 249.200  
-> 11/2011  
30 Nm  
> 90°  
> 90°  
M8: 23 NmZKS 249.210  
11/2011 ->  
30 Nm  
> 90°  
> 140°  
M8: 23 Nm**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. N63/N63N/S63/S63T B40/B44 ÷0,75mm

F07/F10/F11 550i, iX, M5

F06/F12/F13 650i, iX, M6

F01/F02/F04 750i, Li, iX, LiX, Alpina B7, B7L, Hybrid 7

E70 X5 50iX, X5 M

E71/E72 X6 50iX, X6 M, Hybrid X6

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/17

**\*217.580\***