

Anziehvorschrift für Zylinderkopf
Tightening Instructions for Cylinder Head
Instructions de serrage pour culasse
Prescripciones de apriete para culatas

003.270


passend für / suitable for
adaptable à / adaptable a

Daedong




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

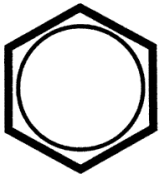

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

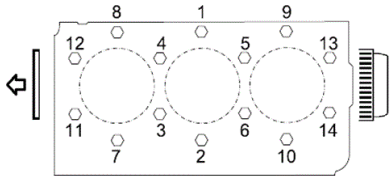

Anziehen/
Tightening/
Serrage/
Apriete

* 103.0~107.9 Nm
★ warm up
● 30 minutes
103.0~107.9 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot.: 3A165

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

003.270