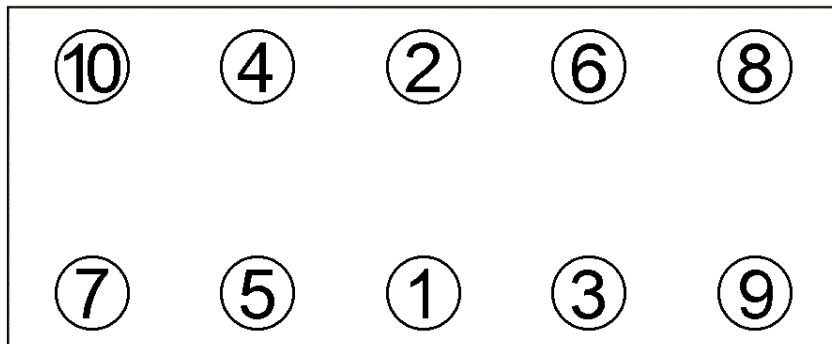


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****814.262**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo820.490  
M 10x1,5x135Anziehen/  
Tightening/  
Serrage/  
Apriete
 20 - 40 Nm  
 40 - 60 Nm  
 90°  
 90°
**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 83,0 mm, ÷: 1,70 mm

Mot: JGA, JPA, JPC, L4B, L6B, LJA, LJB, LJC, LJD

LJE, LJF, LP1, LP2, LP3, LPA, LR1LR2, LRA

LRB, LUA, LUB, LUC, LUD, LUG, LUH, LUJ, LUK

1,3/1,6 ltr. HL/CFI/EFI/CVH

Fiesta, Escort, Orion

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*814.262\***