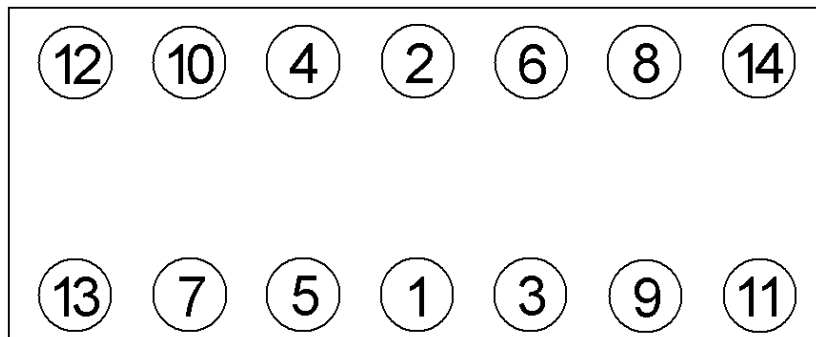


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****353.427**passend für / suitable for  
adaptable à / adaptable a**Volkswagen****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

819.891

M 11x1,25x105

Anziehen/  
Tightening/  
Serrage/  
Apriete

- ⊙ 40 Nm
- ⊙ 60 Nm
- 90°
- 90°
- \* 80°C
- 90°
- 1000 km
- 90°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

78,5 mm Ø, -/1,6 mm ÷

2,4 Ltr. Diesel, Mot.DW,1S

LT 28 - LT 50, ab Chassis 28 D 007 274&gt;

55 kW (75 PS) 12/1982&gt;08/1992

2,4 Ltr. Turbo-Diesel, Mot.DV,1G

LT 40,45,50, ab Chassis 28 D 007 274&gt;

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

**\*353.427\***