

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

436.651

passend für / suitable for
adaptable à / adaptable a





Citroën / Peugeot

Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

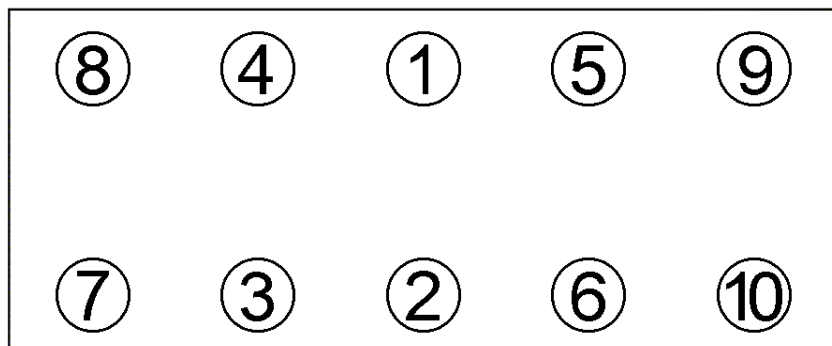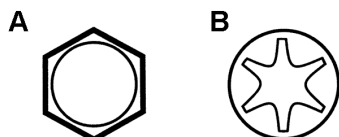

758.280
M 11x1,5x175

Anziehen/
Tightening/
Serrage/
Apriete

A:
⚙ 60 Nm
☐ 20 Nm + 120°
✳ 15 min
● 120 min
☐ 20 Nm + 120°

B:
⚙ 60 Nm
☐ 20 Nm + 300°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 84,5 mm; ÷: 1,48 mm

Mot: XU5M/J/JA/S/CP/JP, XU5 1C/2C
XU7JB/JP, XU9S/J/JA/J4, XU9 2C
1,6-1,9 ltr.
53-116 kW (72-157 PS)

BX, ZX, Xantia, Xsara, ab 07/1987>

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

436.651