

Important technical note relating to this unit

Before fitting check the 80a PAL type fuse as this fuse can blow causing no charge.



Also check for corrosion around and underneath the fuse connections which is common.