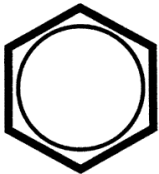


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		475.532 passend für / suitable for adaptable à / adaptable a	 Das Original															
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo																		
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete <table border="1"> <tr> <td>15</td> <td>13</td> <td>11</td> <td>12</td> <td>14</td> </tr> <tr> <td>9</td> <td>5</td> <td>1</td> <td>3</td> <td>7</td> </tr> <tr> <td>10</td> <td>6</td> <td>2</td> <td>4</td> <td>8</td> </tr> </table>		15	13	11	12	14	9	5	1	3	7	10	6	2	4	8
15	13	11	12	14														
9	5	1	3	7														
10	6	2	4	8														
Anziehen/ Tightening/ Serrage/ Apriete																		
* M16 (1-10) 95 Nm 156 Nm 90° 90° * M8 (11-15) 24 Nm 31 Nm																		
Zeichenerklärung / Explanations / Explication / Explicacion																		
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos														
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)														
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo														
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera														
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro														
Motortyp / Engine type / Type de moteur / Tipo de motor Navistar International 6,4 L Power Stroke																		
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*475.532*																