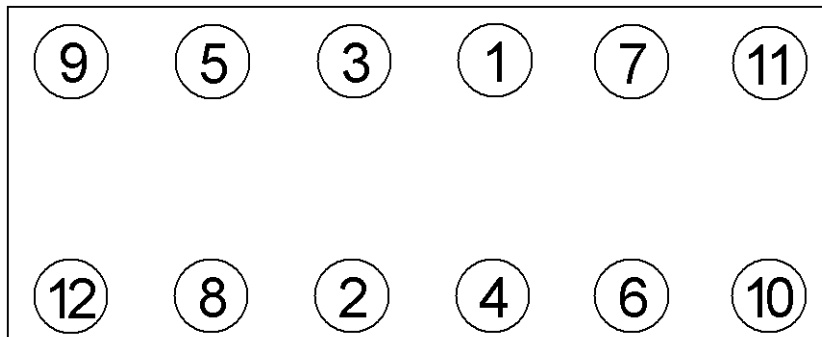


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****820.393**passend für / suitable for
adaptable à / adaptable a**Audi****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo819.875
M 12 x 115Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 40 Nm
- ⊙ 60 Nm
- 90°
- 90°
- * 80°C
- 90°
- 1.000 km
- 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 76,5

Mot. CN, 5 Cyl., 2,0 l Diesel, 51,5 kW (70 PS)

8/1984>7/1989

DE, 66 kW (90 PS), 8/1985>12/1987

NC, 75 kW (101 PS), 3/1988>12/1990

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

820.393