

H&R®

SYSTEM DRA

**WICHTIGE HINWEISE!
BITTE UNBEDINGT
VOR DER MONTAGE LESEN.**

**IMPORTANT NOTES!
PLEASE READ
BEFORE INSTALLATION.**

DEUTSCH | ENGLISH

**MADE IN GERMANY
WWW.H-R.COM**



Wichtige Sicherheits- und Einbauhinweise für Trak⁺[®] Spurverbreiterungen System DRA

Bitte unbedingt vor dem Einbau der Spurverbreiterungen die Sicherheits- und Einbauhinweise, die Montagehinweise, sowie das Teilegutachten oder die Genehmigungen durchlesen und die darin enthaltenen Anweisungen genau befolgen. Die entsprechenden Teilegutachten oder Genehmigungen und die Einbauhinweise erhalten Sie unter www.h-r.com/gutachten.

Der Anbau von Spurverbreiterungen kann bei nicht sach- und fachgerechter Handhabung zu erheblichen Personen- und Sachschäden führen.

Vergleichen Sie vor dem Einbau das Teilegutachten oder die Genehmigungen mit den Papieren des Fahrzeugs, ob dieses H&R-Produkt für Ihr Fahrzeug geprüft worden ist. Vergleichen Sie bitte das H&R-Produkt mit dem Teilegutachten oder den Genehmigungen, ob alle Bezeichnungen korrekt sind und dieses H&R-Produkt für Ihr Fahrzeug bestimmt ist.
Die Verwendung an Fahrzeugen, die nicht im Teilegutachten oder den Genehmigungen aufgeführt sind, ist nicht zulässig.

Lassen Sie den Einbau nur in einer Werkstatt mit entsprechend geschultem Personal vornehmen. Nur diese verfügen über das entsprechende Fachwissen und Werkzeug. Fahrzeuge mit Hybrid- oder Elektroantrieb dürfen nur in Fachbetrieben oder Werkstätten umgerüstet werden, die spezielle Schulungen für Fahrzeuge mit Hochvoltssystemen besucht haben und in dem Umgang mit dieser Technik autorisiert sind.

Die Verwendung von Stahlfelgen ist generell ausgeschlossen, sofern in dem jeweiligen fahrzeugspezifischen Teilegutachten oder den Genehmigungen die Verwendung von Stahlfelgen nicht ausdrücklich freigegeben ist.

Bewahren Sie diese Sicherheits- und Einbauhinweise im Fahrzeug auf und beachten Sie diese Hinweise bei einem Radwechsel.

Die von uns vorgesehene sichere Funktion und Zulässigkeit der Spurverbreiterungen setzt die strikte Beachtung und Einhaltung dieser Sicherheits- und Einbauhinweise sowie der jeweiligen Teilegutachten oder den Genehmigungen voraus!

Sollte es nach dem Kauf und/oder Einbau von H&R Produkten zu Beanstandungen kommen, wenden Sie sich bitte an Ihren Verkäufer.

Einbauanleitung

1. Reinigen Sie die Mittenzentrierung und Anlagefläche am Fahrzeug vorsichtig mit einer Drahtbürste von Schmutz und Rost. (siehe Bild 1)
2. Legen Sie die Spurverbreiterung in die Felge und prüfen Sie, ob die Spurverbreiterung mit der Aussenfase und der Mittenzentrierung spielfrei an der Innenfase, der Mittenzentrierung und den Anlageflächen der Felge anliegt. (siehe Bild 2 und 3)
3. Setzen Sie die Spurverbreiterung auf die Mittenzentrierung am Fahrzeug und prüfen Sie, ob die Spurverbreiterung mit der Innenfase und der Mittenzentrierung bündig und spielfrei an der Achsanlagefläche anliegt. (siehe Bild 4 und 5)
4. Entfernen Sie eventuell vorhandene Zentrierstifte, Halteklammern und/oder überstehende Brems Scheibenbefestigungsschrauben, wenn dies laut Teilegutachten oder laut Genehmigungen gefordert wird. (siehe Bild 1)
5. **Befestigen Sie die Spurverbreiterung mit den mitgelieferten Schrauben am Fahrzeug.**
Kontrollieren Sie die Mindesteinschraubtiefe der Schrauben:
 - Gewinde M12x1,25 = mind. 8.0 Umdrehungen = ca. 10 mm tragendes Gewinde
 - Gewinde M12x1,5 = mind. 6.5 Umdrehungen = ca. 10 mm tragendes Gewinde
 - Gewinde M12x1,75 = mind. 6.5 Umdrehungen = ca. 12 mm tragendes Gewinde
 - Gewinde M14x1,25 = mind. 9 Umdrehungen = ca. 12 mm tragendes Gewinde
 - Gewinde M14x1,5 = mind. 7.5 Umdrehungen = ca. 11 mm tragendes Gewinde
 - Gewinde M15x1,25 = mind. 8.0 Umdrehungen = ca. 10 mm tragendes Gewinde
 - Gewinde 1/2" UNF = mind. 8.0 Umdrehungen = ca. 11 mm tragendes Gewinde
6. Die aktuellen Anzugsmomente zur Befestigung der Spurverbreiterungen an das Fahrzeug entnehmen Sie den Angaben des Fahrzeugherstellers für die Befestigung von Serienrädern und dem Teilegutachten oder den Genehmigungen für die Spurverbreiterung.
7. Die Schraubenköpfe der mitgelieferten Schrauben dürfen nicht aus der Spurverbreiterung herausstehen. (siehe Bild 5)
8. Prüfen Sie nach Montage der Spurverbreiterungen die Freigängigkeit der Schrauben zu Fahrzeuginnenteilen. (ABS-Sensoren, Bremsanlagen, etc.)
9. **Stecken Sie die Serienradschraube in die Felge und ermitteln Sie die aus der Felge herausstehende Länge der Serienradschraube. (siehe Bild 6)**
Diese Länge der Serienradschraube muss kleiner sein als die Dicke der Spurverbreiterung.
Ist dies nicht der Fall muss die Serienradschraube gekürzt oder ausgetauscht werden.
Die aus der Felge herausstehende Länge der Serienradschrauben muss durchgehend mit Gewinde sein. (siehe Foto 6)
Ist dies nicht der Fall muss die Serienradschraube gegen Schrauben mit durchgehendem Gewinde ausgetauscht werden.

10. Entfernen Sie Verunreinigungen am Gewinde der Serienradschrauben. Ersetzen Sie schadhafte Serienradschrauben. Setzen Sie die Räder auf die Spurverbreiterungen und befestigen Sie die Räder mit den Serienradschrauben. Kontrollieren Sie die Mindestschraubtiefe der Serienradschrauben:

- Gewinde M12x1,25 = mind. 8.0 Umdrehungen = ca. 10 mm tragendes Gewinde
- Gewinde M12x1,5 = mind. 6.5 Umdrehungen = ca. 10 mm tragendes Gewinde
- Gewinde M12x1,75 = mind. 6.5 Umdrehungen = ca. 12 mm tragendes Gewinde
- Gewinde M14x1,25 = mind. 9 Umdrehungen = ca. 12 mm tragendes Gewinde
- Gewinde M14x1,5 = mind. 7.5 Umdrehungen = ca. 11 mm tragendes Gewinde
- Gewinde 1/2" UNF = mind. 8.0 Umdrehungen = ca. 11 mm tragendes Gewinde
- Gewinde M15x1,25 = mind. 8.0 Umdrehungen = ca. 10mm tragendes Gewinde

11. Die aktuellen Anzugsmomente (beachten Sie eventuelle Unterschiede von Alufelgen zu Stahlfelgen) zur Befestigung der Räder an die Spurverbreiterung entnehmen Sie den Angaben des Fahrzeugherstellers für die Befestigung von Serienrädern, des Radherstellers bei Verwendung von Sonderrädern und dem Teilegutachten oder den Genehmigungen für die Spurverbreiterungen.

12. Achten Sie auf eine sorgfältige Montage. Je Rad sollten zuerst zwei gegenüberliegende Schrauben zentrisch angezogen werden. Verwenden Sie keinen Schlagschraub, sondern einen Drehmomentschlüssel. Bei eventuell abweichender Schlüsselweite der mitgelieferten Schrauben ist das Bordwerkzeug entsprechend zu ergänzen.

13. Die im fahrzeugspezifischen Teilegutachten oder den Genehmigungen aufgeführten Auflagen und Hinweise sind einzuhalten und zu beachten.






Prüfen Sie die Freigängigkeit der Räder und die notwendige Radabdeckung.

Die Freigängigkeit der Räder und die notwendige Abdeckung der Reifen muss nach Anbau der Spurverbreiterungen gewährleistet sein.

14. **Alle Radschrauben sind nach ca. 100 km Fahrstrecke mit dem Drehmomentschlüssel nachzuziehen. (Anzugsmomente gem. Angaben des Fahrzeugherstellers für die Befestigung von Serienrädern, bzw. des Radherstellers bei Verwendung von Sonderrädern) Beachten Sie eventuelle Unterschiede von Alufelgen zu Stahlfelgen.**

15. Die nachträgliche Bearbeitung von Spurverbreiterungen und Zubehör ist nicht zulässig.

16. Die Rücknahme von Spurverbreiterungen und Zubehör ist nur bei unmontierten Neuteilen, ohne Einbauspuren und Beschädigungen, in Originalverpackung möglich.

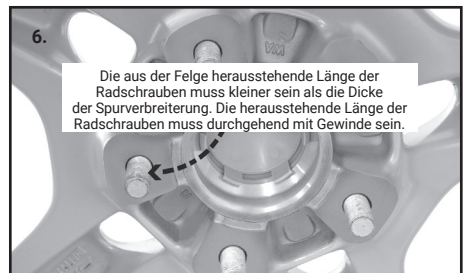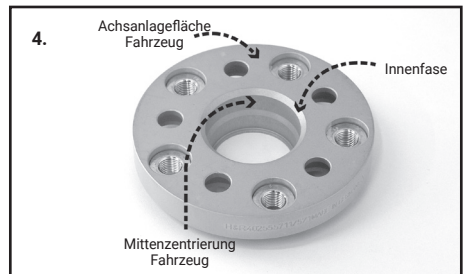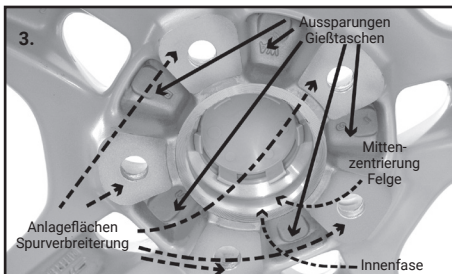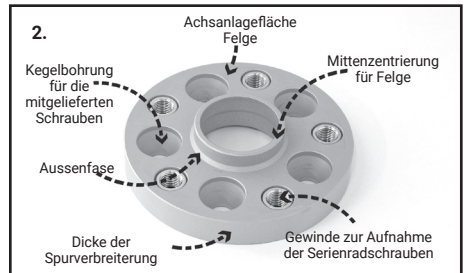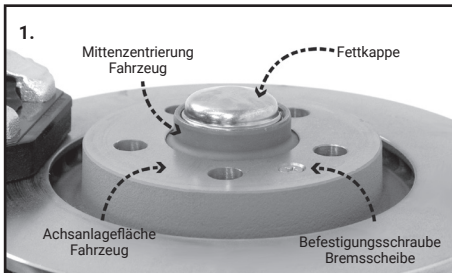

Important safety and installation information for Trak⁺[®] wheel spacers DRA

Prior to installing this wheel spacer, carefully read the installation instructions and parts approval or vehicle type approval, and follow the instructions given therein.
Copies of the applicable parts approval or vehicle type approval and/or installation instructions can be obtained from your dealer specialist or at www.h-r.com.

Failure to observe these instructions and improper handling of the wheel spacers may cause serious damage to persons and property.

Prior to installation, compare the parts approval or vehicle type approval with your vehicle documents (registration certificate) and check if this H&R product has been approved for use with your vehicle.
Please compare your H&R product with the parts approval or vehicle type approval, and check if all labels are correct and if your H&R product may be used in combination with your vehicle.
H&R products must not be used on vehicles not listed in the parts approval or vehicle type approval.

Make sure that the components are installed only by an authorized mechanic/ workshop. Only these authorized mechanics have the necessary specialized knowledge and equipment.
Hybrid and Battery Electric Vehicles may only be retrofitted in specialized workshops where the staff visited special trainings on high voltage systems and are authorized to work with this technology.

Steel wheels can generally not be used unless the car-specific approval or vehicle type approval allows these explicitly.

Keep these safety and installation instructions in your vehicle and follow the instructions when changing your wheels.

The safe functionality and reliability of our wheel spacers is subject to strict adherence to and compliance with these safety and installation instructions as well as the applicable parts approval or vehicle type approval!

Failure to observe these instructions and improper handling of the wheel spacers may cause serious damage to persons and property!

Should there be complaints after purchase and/or installation of H&R products, please contact your dealer.

Installation instructions

1. Using a wire brush, carefully remove any dirt and rust from the vehicle's center alignment and the bearing surface. (see fig. 1)
2. Insert the wheel spacer into the wheel rim and make sure the it rests – without any backlash - with its outer bezel and the center alignment against the inner bezel, the center alignment, and the bearing surface. (see figures 2 and 3)
3. Place the wheel spacer onto the vehicle's center alignment and make sure the wheel spacer with its inner bezel and the center alignment rests flush and without any backlash against the axle bearing surface. (see figures 4 and 5)
4. If applicable and required by the parts approval or the vehicle type approval, remove any centering pins, retaining clamps, and/or protruding brake disk fastening screws. (see fig. 1)
5. **Use the included screws to attach the wheel spacer to your vehicle.**







Verify the minimum thread reach of the elongated wheel bolts:

- Thread M12x1.25 = at least 8.0 rotations = approx. 10 mm of load-bearing thread
- Thread M12x1.5 = at least 6.5 rotations = approx. 10 mm of load-bearing thread
- Thread M12x1.75 = at least 6.5 rotations = approx. 12 mm of load-bearing thread
- Thread M14x1.25 = at least 9 rotations = approx. 12 mm of load-bearing thread
- Thread M14x1.5 = at least 7.5 rotations = approx. 11 mm of load-bearing thread
- Thread M15x1.25 = at least 8.0 rotations = approx. 10 mm of load-bearing thread
- Thread 1/2" UNF = at least 8.0 rotations = approx. 11 mm of load-bearing thread

6. For the current tightening torques necessary to attach wheel spacers to your vehicle, refer to the information provided by the vehicle manufacturer concerning the attachment of series-production wheels as well as the parts certificate concerning track wideners.
7. The screwheads of the included bolts must not protrude from the wheel spacer. (see fig. 5)
8. After completing the installation, check if the bolts can be moved without coming into contact with any interior parts of the vehicle. (ABS sensors, braking systems, etc.)
9. **Insert the series-production wheel screw into the wheel rim, and determine the length of the series-production wheel screw protruding from the wheel rim. (see fig. 6)**
The length of the series-production wheel screw must be shorter than the thickness of the wheel spacer.
If this is not the case, shorten or replace the series-production wheel screw.
The series-production wheel screw protruding from the wheel rim must be threaded all the way down the shank. (see photo 6)
If this is not the case, replace the series-production wheel screw with a fully threaded screw.

Failure to observe these instructions and improper handling of the wheel spacers may cause serious damage to persons and property.

10. Remove any dirt from the thread of the series-production wheel screw. Replace any damaged series-production wheel screws. Place the wheels onto the wheel spacer and fasten the wheels using the series-production wheel screws. Verify the minimum thread reach of the series-production wheel screws:
- Thread M12x1.25 = at least 8.0 rotations = approx. 10 mm of load-bearing thread
 - Thread M12x1.5 = at least 6.5 rotations = approx. 10 mm of load-bearing thread
 - Thread M12x1.75 = at least 6.5 rotations = approx. 12 mm of load-bearing thread
 - Thread M14x1.25 = at least 9 rotations = approx. 12 mm of load-bearing thread
 - Thread M14x1.5 = at least 7.5 rotations = approx. 11 mm of load-bearing thread
 - Thread 1/2" UNF = at least 8.0 rotations = approx. 11 mm of load-bearing thread
 - Thread M15x1.25 = at least 8.0 rotations = approx. 10mm of load-bearing thread
11. For the current tightening torques (pay attention to possible differences between aluminum and steel wheel rims), refer to the information provided by the vehicle manufacturer concerning the attachment of the wheels to the wheel spacer, or, if using special-purpose wheels, refer to the specifications of the wheel manufacturer, as well as the parts certificate concerning wheel spacers.
12. Proper and careful installation is essential. Start by centrally tightening two opposing screws on each wheel. Use a torque wrench rather than an impact screwdriver. In case the included screws have different wrench sizes, supplement your tool kit accordingly.
13. Observe and follow the restrictions and information provided in the vehicle parts certificate. Verify the unobstructed operability of the wheels and the required wheel covers.
- After attaching the wheel spacer, verify the unobstructed operability of the wheels and the required covers of the tire running surfaces.
14. Using a torque wrench, re-tighten all wheel bolts after approx. 100 km. (tightening torques according to the information provided by the vehicle manufacturer concerning the attachment of series-production wheels or those of the wheel manufacturer in connection with the use of special-purpose wheels). Pay attention to potential differences between aluminum and steel wheel rims.
15. Modifications to the wheel spacers after they have been installed are not permissible.
16. Wheel spacers and accessories may only be returned as uninstalled new parts in their original packaging and without any signs of damage or wear from installation.

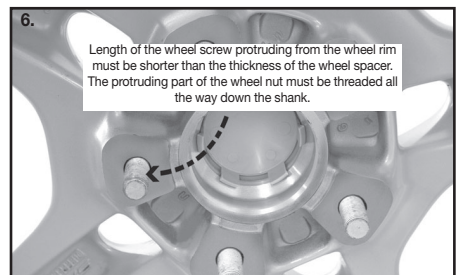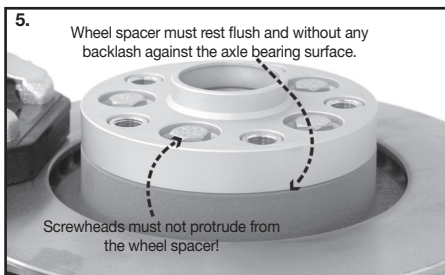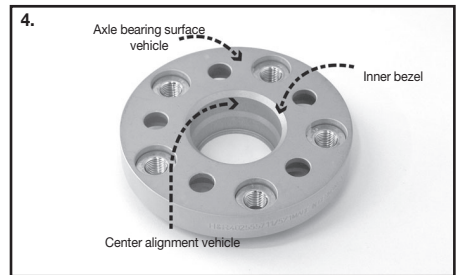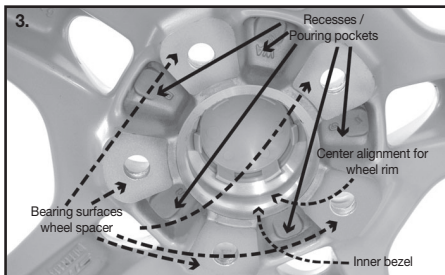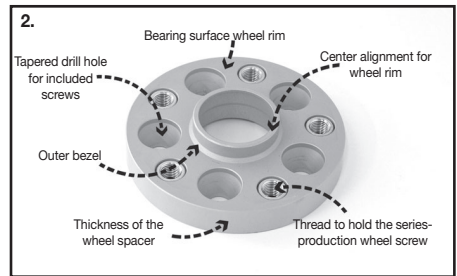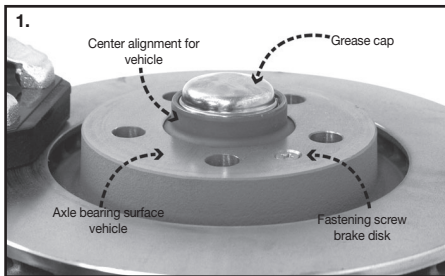



TRAK⁺ Spurverbreiterungen Montage Hinweise

Wichtige Montage-Hinweise. Bitte vor der Montage am Fahrzeug lesen und die Hinweise befolgen!

H&R TRAK⁺ Spurverbreiterungen sind ausschließlich für die Verwendung in straßenzugelassenen Fahrzeugen vorgesehen, die den geltenden gesetzlichen Vorschriften entsprechen und im öffentlichen Straßenverkehr bewegt werden. Von allen anderen Verwendungen, insbesondere der Montage an nicht dafür vorgesehenen Fahrzeugen wird abgeraten.

Vermeiden Sie unübliche und aggressive Fahrmanöver mit übermäßiger Beanspruchung des Fahrzeuges. (Rennveranstaltungen etc.)

H&R TRAK⁺ Spurverbreiterungen werden unter ständiger Qualitätskontrolle und strikter Sorgfalt hergestellt, trotzdem können selbst hochwertige Produkte schadhaft werden.

Um Schäden zu vermeiden beachten Sie bitte folgende Hinweise:

Lassen Sie den Einbau nur in einer Werkstatt mit entsprechend geschultem Personal durchführen. Nur diese verfügen über das entsprechende Fachwissen und Werkzeug.

Lesen Sie die beiliegenden Sicherheits- und Einbauhinweise genau durch und befolgen die darin genannten Hinweise.

Beachten Sie folgende zusätzlichen Hinweise:

1. Vor dem Einbau:

- Vergleichen Sie bitte die gelieferten Artikel mit dem Lieferschein
- Vergleichen Sie bitte den Inhalt der Lieferung mit dem Teilegutachten oder den Genehmigungen
- Vergleichen Sie ebenfalls das Teilegutachten oder die Genehmigungen mit den Fahrzeugpapieren
- Die Verwendung von Stahlfelgen ist generell ausgeschlossen, sofern in dem jeweiligen fahrzeugspezifischen Teilegutachten oder in den Genehmigungen die Verwendung von Stahlfelgen nicht ausdrücklich freigegeben ist.
- Prüfen Sie die Vollständigkeit der Lieferung
- Prüfen Sie bitte, ob das geeignete Werkzeug zum Einbau vorhanden ist
- Bestellen Sie eventuell benötigte zusätzliche Teile
- Messen Sie alle für den Umbau wichtigen Maße
- Bei Unstimmigkeiten oder Abweichungen nehmen Sie bitte Kontakt mit Ihrem Verkäufer auf

2. Während des Einbaus:

- Arbeiten Sie nach Vorgabe oder Werkstatthandbuch des Fahrzeugherstellers
- Beachten Sie alle Hinweise der Einbauanleitung
- Prüfen Sie bitte alle demontierten Teile auf ihre Funktionsfähigkeit
- Bei der Verwendung von Stahlrädern in Verbindung mit Distanzringen ist darauf zu achten, das die Anlagefläche der Felge auf dem Distanzring genauso groß ist wie die auf der serienmäßigen Anlagefläche.
- Ersetzen Sie defekte Originalteile durch neue Originalteile
- Benutzen Sie nur geeignetes Werkzeug zur Montage /Demontage
- Bearbeiten Sie bitte keine Teile zusätzlich oder machen diese passend

Bei nicht passenden Produkten stoppen Sie den Einbau oder Umbau unverzüglich. Der Einbau von Produkten in nicht dafür geeignete Fahrzeuge kann zu schweren Sach- und Körperschäden führen.

Nehmen Sie in diesem Fall bitte Kontakt mit Ihrem Händler auf und schildern Sie ihm das Problem. Halten Sie die Fahrzeugpapiere oder technische Unterlagen bereit, um eventuell auftretende Rückfragen beantworten zu können. Bitte achten Sie darauf, dass nach erfolgter Umrüstung nicht mehr Teile übrig bleiben, als Sie ersetzt haben.

3. Nach der Umrüstung:

- Nutzen Sie nur vom Fahrzeughersteller vorgegebene Anzugs- und Befestigungswerte
- Prüfen und korrigieren Sie die korrekte Befestigung aller gelösten und montierten Teile
- Prüfen und korrigieren Sie die Freigängigkeit der Rad/Reifenkombination (beladen /unbeladen)
- Prüfen und korrigieren Sie die Freigängigkeit zu allen Achs- und Lenkungsteilen (bei allen Lenkeinschlägen)
- Prüfen und korrigieren Sie die Freigängigkeit zu allen Bremsenteilen und Bremschläuchen (bei allen Lenkeinschlägen)

Die Nichtbeachtung dieser Prüf- und Regulierungsarbeiten kann zum Ausfall von Fahrzeugsystemen und zu folgenschweren Sach- und Körperschäden führen.

4. Probefahrt:

- Durch den Einbau von H&R Produkten ändert sich das Fahrverhalten Ihres Fahrzeuges
- Fahren Sie deshalb so lange vorsichtig, bis Sie sich an die geänderten Fahreigenschaften ihres Fahrzeuges gewöhnt haben.
- Ungewöhnliches Fahrverhalten ihres Fahrzeuges kann darauf hinweisen, dass die eingebauten Produkte nicht für Ihr Fahrzeug geeignet sind oder Fehler bei der Montage und/oder Einstellung der Fahrwerksgeometrie gemacht wurden. Lassen Sie den Einbau nur in einer Werkstatt mit entsprechend geschultem Personal vornehmen.
- Lassen Sie danach unverzüglich eine Fahrzeugabnahme durch eine dafür vorgesehene Prüforganisation durchführen.

Eine Nichtbeachtung kann zu folgenschweren Sach- und Körperschäden führen.

5. Pflegehinweise für H&R TRAK⁺ Spurverbreiterungssysteme:

- Verwenden sie zum Reinigen keine aggressiven Reinigungsmittel, Säuren, Laugen oder ähnliches.
- Verwenden Sie ausschließlich Wasser oder säurefreie Reiniger.

Die Verwendung aggressiver Flüssigkeiten kann zu Korrosion und daraus resultierendem Verlust des Befestigungsmaterials führen.

Überprüfen sie bei jedem Radwechsel Spurverbreiterungen und Befestigungsmaterial auf Beschädigungen und korrekte Befestigung.

Ein Nichtbeachten dieser Hinweise kann zu folgenschweren Sach- und Körperschäden führen.

Sollte es nach dem Kauf und/oder Einbau von H&R Produkten zu Beanstandungen kommen, wenden Sie sich bitte an Ihren Verkäufer oder Montagebetrieb. Führen Sie diese Papiere und die Sicherheits- und Einbauhinweise ständig im Fahrzeug mit, damit Sie jederzeit darauf zurückgreifen können.



TRAK⁺ Wheel Spacer Important Mounting-Instructions

Important Mounting Instructions. Must be read before installation!

H&R TRAK⁺ Wheel Spacers are intended exclusively for use in vehicles which are permitted for use on public roads, and which fulfill the applicable legal requirements. You are unconditionally advised against any other use.

Avoid unusual and aggressive driving manoeuvres which place excessive demands on the vehicle (racing events, etc.).

H&R TRAK⁺ wheel spacers are manufactured under permanent quality control and with the greatest of care; nevertheless, even top-quality products may become defective.

To avoid damage to the product, please note the following information:

Make sure that the components are installed only by an authorised or specialized workshop. Only these workshops have the necessary specialist knowledge and equipment.

Please read the supplied safety and mounting instructions carefully and follow the mentioned instructions in there.

Additionally, please note the following:

1. Before installation:

- Please compare the item delivered with the delivery note
- Please compare the content of the delivery with the parts approval or the vehicle type approval
- Please also compare the parts approval or the vehicle type approval with the vehicle papers
- Steel wheels can generally not be used unless the car-specific approval or the vehicle type approval allows these explicitly
- Check that the delivery is complete
- Please check that the appropriate tools are available for fitting
- Order any additional parts which may be necessary
- Measure all dimensions relevant to the conversion
- If there are disagreements or deviations, please contact your vendor

2. During installation:

- Work as per the vehicle's factory service manual or workshop manual
- Comply with all details in the technical tips provided with product (installation or mounting instruction)
- Please check that all parts removed function correctly
- When using steel-rims in combination with spacers it is necessary to assure that the contact surface of the wheel on the spacer is exactly as big as on the OE contact surface.
- Replace defective original parts with new original parts
- Use only suitable tools and equipment for installation and disassembly
- Do not carry out extra work on parts or adapt them to fit

If products do not match, stop the installation or conversion immediately. The installation of products into vehicles for which they are not suitable can result in severe material damage and physical injury.

In this case, contact your dealer and explain the problem to him. Keep the vehicle papers and/or technical documentation on hand, so that you can answer any questions which arise. Please ensure that after a conversion is complete, there are not more parts left over than you replaced.

3. After the conversion:

- Use only the tightening and fixing values provided by the vehicle's factory service manual
- Test and adjust the correct securing of all loosened and fitted parts
- Test and adjust the ease of movement of the wheel/tire combination (loaded/unloaded)
- Test and adjust the ease of movement of all axle and steering parts (for all steering movements)
- Test and adjust the ease of movement of all brake parts and brake hoses (for all steering movements)

Non-compliance with this test and adjustment work can result in failure of vehicle systems, material damage and physical injury with severe consequences.

4. Test drive:

- Installing H&R products will alter the handling of your vehicle.
- Therefore, drive with care until you have become accustomed to the altered vehicle characteristics.
- Unexpected vehicle handling characteristics can indicate that the products installed are not suitable for your vehicle, or that there are errors in installation and/or in adjustment to the suspension geometry. In this case, please have the vehicle inspected immediately in a specialist workshop.

Failure to do so can result in severe material damage and physical injury.

5. Care instructions for H&R TRAK⁺ wheel spacers:

- Do not use any aggressive cleaning agents, acids, leaches or similar for cleaning the spacers.
- Only use water and acid-free cleaning agents.

The use of aggressive fluids can cause corrosion and result in loosing the tightening material. Please control the spacer and tightening material at every wheel change for correct fixation and/or damages.

Non-observance of these instructions can result in severe material damage and physical injury.

If you have any complaints after purchase and/or installation of H&R products, please contact your vendor.

Please always carry the necessary paperwork and the mounting instructions along in the car to have them available anytime.

Achtung!

Bei Teilegutachten oder Genehmigungen ab Erstellungsdatum März 2011 ist die Verwendung von Stahlfelgen generell ausgeschlossen, soweit nicht anders im Teilegutachten oder den Genehmigungen unter Punkt „II. Beschreibung des Teiles / des Änderungsumfanges“ vermerkt.

www.h-r.com

Attention!

In parts approval or vehicle type approval from March 2011 onwards the use of steel wheels is generally excluded if not otherwise mentioned in the parts approval or the vehicle type approval.

(See chapter „II. Description of the component / scope of modification“)

www.h-r.com



**FOLLOW
US NOW!**

H&R[®]

H&R SPEZIALFEDERN GMBH & CO. KG
ELSPER STRASSE 36 | 57368 LENNESTADT

MADE IN GERMANY
WWW.H-R.COM