



Filter, Innenraumluft

Hinweis:

Der Innenraumluftfilter befindet sich im Motorraum des Fahrzeuges auf der Beifahrerseite.

Ausbau:

Die Motorhaube öffnen und die Abdeckung unterhalb der Windschutzscheibe durch Lösen der Schrauben entfernen.

(Abb. 1)

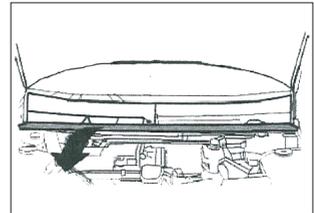


Abb. 1

Den Innenraumluftfilterkasten öffnen und den Filter entnehmen.

(Abb. 2)

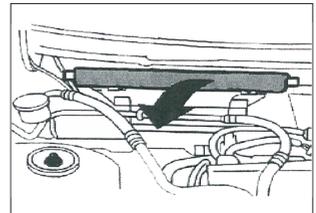


Abb. 2

Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

Auf richtigen Sitz des Filterelements achten!

Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!






Filter, Cabin Air

Note:

The cabin air filter is installed in the engine compartment at the co-driver's side.


Filter Replacement:

Open the hood and detach the cover under the windshield by unscrewing the fitting bolts.
(pict. 1)

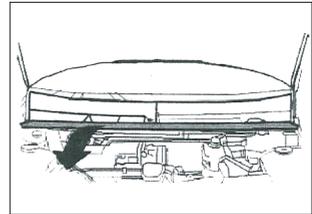

pict. 1

Open the cabin air filter case and take out the filter.
(pict. 2)

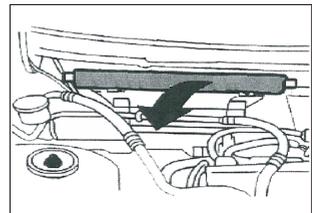

pict. 2

The installation is done in reverse sequence of replacement.

Take care about correct fitting of the filter!

Please think about the environment when you throwing away the old filter!

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

