SOLENOID INSTALLATION

1. After installing new O-rings, generously apply a non-petroleum lubricant such as silicone, lithium, or dielectric grease to the tip of the solenoid. (Figure 1)



FIGURE 1

2. Put the air spring on a table on it's side or between your feet while sitting in a chair for better leverage as you install the solenoid. (Figure 2)



FIGURE 2

3. Align the appropriate solenoid tab at the opening. Push inward and clockwise to the first stop, and then to the second stop. Push in with force. (Figures 3, 4)

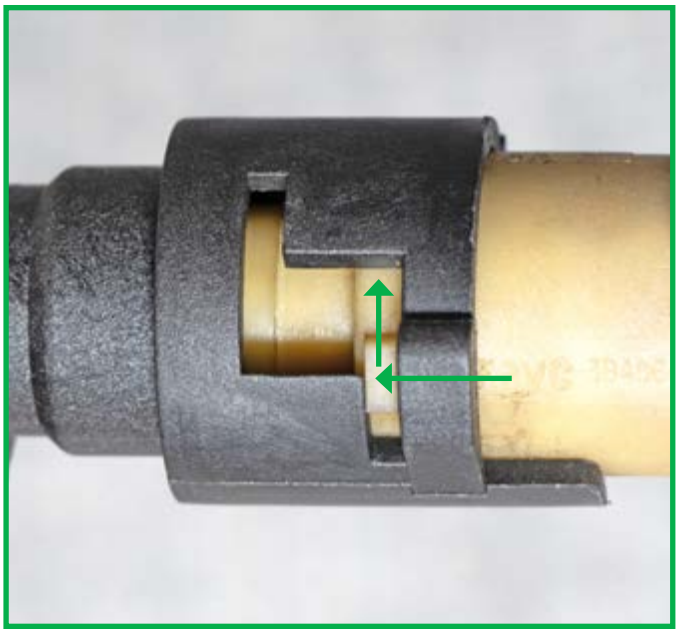


FIGURE 3

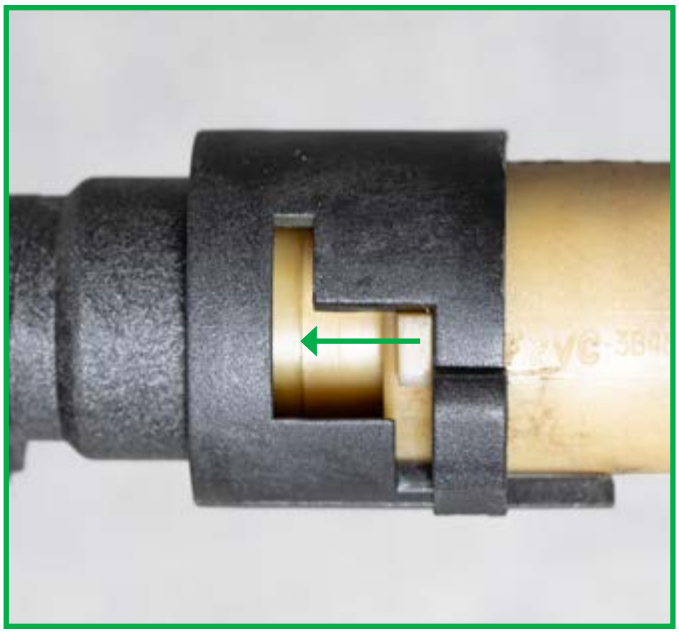


FIGURE 4

4. Ensure the solenoid is fully locked in place before beginning installation of the air spring onto the vehicle. (Figure 5)

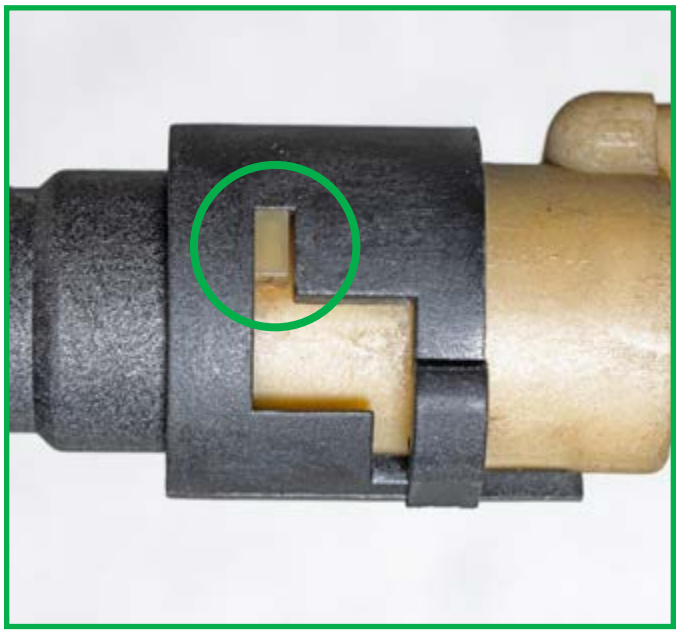


FIGURE 5

5. Reinstall the solenoid retaining clip. (Figure 6)



FIGURE 6

Arnott®
Suspension Products

Arnott US Business Office:

www.arnottsuspension.com

100 Sea Ray Drive
Merritt Island, FL 32953

Call: 800.251.8993
321.868.3016
Fax: 321.868.3703
Email: techassistance@arnottinc.com

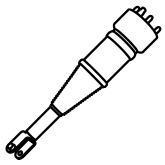
Arnott Europe Business Office:

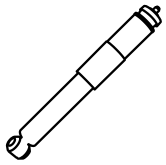
www.arnotteurope.com

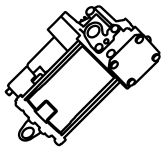
Industrieweg 19
5145 PD, Waalwijk (NL)

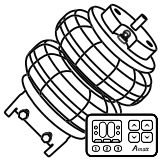
NL Phone: +31 73 7850 580
DE Phone: +31 85 2087 438
UK Phone: +44 203 3186 124
BE Phone: +32 258 846 90
ES Phone: +34 91 901 10 56
FR Phone: +32 78 48 46 93
Email: info@arnotteurope.com

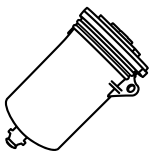

Air Springs

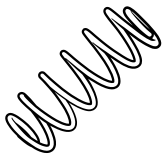

Struts

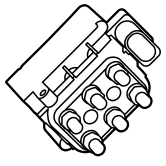

Shocks

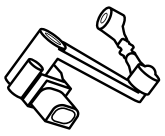

Compressors

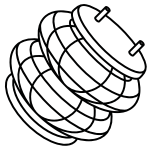

LCV Air Helper Spring Kits


Dryers


Coil Spring Conversion Kits


Valve Blocks


Ride Height Sensors


Pickup Truck Air Helper Springs