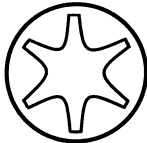


Anziehvorschrift für Zylinderkopf		147.522	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Citroën, Peugeot Das Original	
			
758.270 M 12 x 145			
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 60 Nm ➤ 220°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
⚙ 1,34 mm, Ø 84 mm, 1 Kerbe/notch/encoche/muesca			
Mot.: XUD9TE/TF, XUD9SD 1,9 Ltr. Turbodiesel 66 kW (90 PS)			
BX, Evasion, Jumper, Jumpy, Xantia, Xsara, ZX, 306, 405, 406, 806, Boxer, Expert, Lada Niva Fiat Ducato, Scudo, Ulysse, Suzuki Baleno, Vitara			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*147.522*	