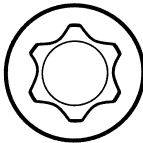


Anziehvorschrift für Zylinderkopf		153.142		
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		PSA, Fiat, Ford, Volvo		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
267.550 M 12x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤ ➤	PSA DW10ATED4 20 Nm 60 Nm 60 Nm 110° 110°	* ☐ ➤ ➤	PSA DW12TED4 20 Nm 60 Nm 20 Nm 60 Nm 110° 110°
				Fiat, Ford, Volvo * 30 Nm 60 Nm ➤ 220°
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
⚙ 1,35 mm, Ø 86 mm, 3 Löcher/holes/trous/agujeros				
Mot.: G6DA, G6DB, G6DC, G6DD, G6DE, G6DF, AZWA QXWA, QXWB, DW10ATED4, DW10BTED4, DW12TED4 RHR, RHK/DW10UTED4, D4202T/T2				
Focus, C-Max / 307, 406, 407, 607, 807 V40II, V50 / C4, C5, C8				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*153.142*	