



Mercedes-Benz	Sprinter	906
Volkswagen	Crafter	2E
		2F

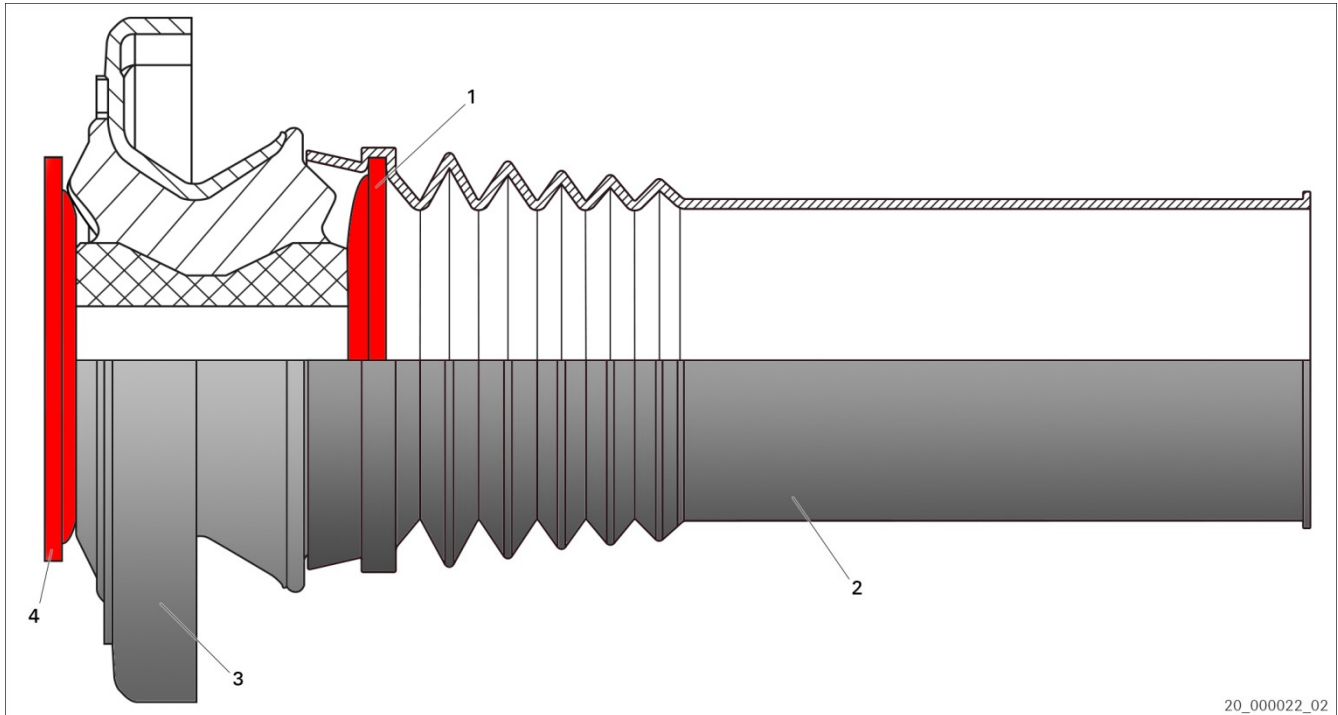


Fig. 1: Suspension-strut mount with service kit

- | | |
|--------------------------------|-------------------|
| 1 Washer | 2 Protective tube |
| 3 Suspension-strut mount (FSL) | 4 Washer |

1. Remove suspension-strut mount (3) and protective tube (2).
Do **not** dispose of washers (1; 4)!
2. Position washer (1) in new protective tube (2).
3. Attach protective tube (2) with washer (1) to shock absorber.
4. Attach suspension-strut mount (3) and washer (4) to shock absorber.
5. Tighten with new nut and correct tightening torque.
Observe the vehicle manufacturer specifications.



www.zf.com/serviceinformation