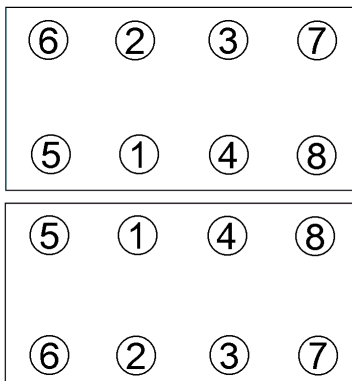


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****475.480**passend für / suitable for  
adaptable à / adaptable a**Mercedes-Benz****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

372.940

M 12x1,75x205

Anziehen/  
Tightening/  
Serrage/  
Apriete

M 12  
 10 Nm  
 60 Nm  
 > 90°  
 > 90°  
 > 90°

M 8  
 20 Nm

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø 83,8 / 1,2 mm rechts/right

Mot: OM 642.820,822,850,870,910,930,940,  
950,960,990,992,993

280CDI/320CDI/350CDI

W211, W212, W221, W164, X164, W251,  
W204, W639, C219, C209, A209, 906**Elring-Serviceteam**Fon +49 7123 724 799  
Fax +49 7123 724 798  
[service@elring.de](mailto:service@elring.de)

24/11/12

**\*475.480\***