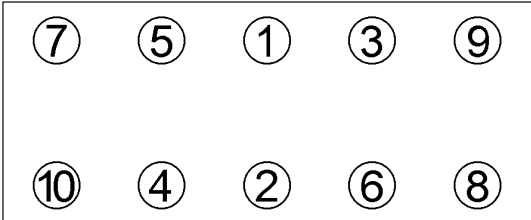


Anziehvorschrift für Zylinderkopf		268.360 passend für / suitable for adaptable à / adaptable a BMW	 Das Original				
Tightening Instructions for Cylinder Head							
Instructions de serrage pour culasse							
Prescripciones de apriete para culatas							
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete					
 802.661 M 12x1,5x147							
Anziehen/ Tightening/ Serrage/ Apriete		* 40 Nm 80 Nm 180° 50 Nm 90° 90° ➤ ➤					
Zeichenerklärung / Explanations / Explication / Explicacion							
* neue Zylinderkopf-schrauben verwenden		use new cylinder head bolts		utiliser des vis neuves		emplar tornillos nuevos	
★ Warmlauf (80°C)		warm up time (80°C)		chauffage (80°C)		calentamiento (80°C)	
□ Schrauben einzeln lösen und wieder anziehen		loosen and tighten each bolt		deserrer et serrer vis par vis		aflojar y apretar tornillo a tornillo	
● Setzzeit		relaxation time		durée de tassement		tiempo de espera	
➤ Drehwinkel		torque angle		angle de serrage		ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor							
Mot. M47N/M47N2 D20							
E87 118d, 120d							
E46 318d,td, 320d,td,Cd							
E90/E91 318d, 320d							
E60/E61 520d							
E83 X3 2.0d							
3 Löcher/Holes/Trous							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				*268.360*			