

# RANCHO

PERFORMANCE SUSPENSION & SHOCKS



## ABS Bracket Relocation Kit RS861001

Front – Toyota Landcruiser 76 Series 2007+, 78,79 Series 1999+.

**IMPORTANT:** These components must be fitted to factory specifications by qualified persons.

This ABS Bracket relocation kit is required to ensure front ABS wires are not too tight at full suspension hang, for vehicles fitted with longer travel front shock absorbers associated with 40 to 50mm front suspension lift.

| Kit Contents: | Qty | Item                  |
|---------------|-----|-----------------------|
|               | 1   | RH Relocation Bracket |
|               | 1   | LH Relocation Bracket |
|               | 2   | Cage Nuts (M8x1.25)   |
|               | 2   | Hex Bolts (M8 x 1.25) |
|               | 2   | Flat Washers (M8)     |
|               | 2   | Spring Washers (M8)   |



### Installation Instructions: Left Hand Side


1. Insert cage nut (supplied), into left hand relocation bracket (supplied) as shown, Pic. 1.
2. Remove bolt securing ABS wire bracket to vehicle chassis, Pic. 2., and using same bolt, fix left hand relocation bracket (supplied) as shown Pic 3., with bracket leg located in chassis hole.
3. Fix vehicle ABS wire bracket to the relocation bracket with new bolt, spring washer and flat washer supplied, as shown Pic 3.



Cage Nut



ABS Wire Bracket

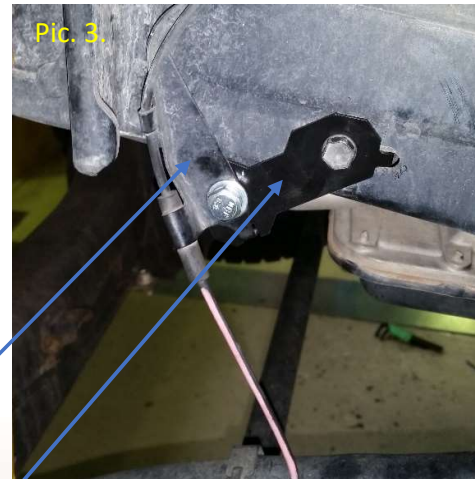

Left Hand Relocation Bracket



**GO RANCHO .COM**

\* For more information visit [gorancho.com](http://gorancho.com)

For more information on the Rancho product range contact our customer service team on:

Phone : 1800 088 205 Email : [customerservice@driv.com](mailto:customerservice@driv.com)

# RANCHO

PERFORMANCE SUSPENSION & SHOCKS




## Left Hand Side (continued).

4. Check ABS Wire is **not too tight** at full suspension hang. It may be necessary to manipulate the chassis and sway bar ABS bracket clamps and re position the wire protection tube and wire, so wire is **not too tight**, pic 4.
5. Ensure bolts are torqued.


Chassis  
Bracket  
ABS  
Wire  
Clamps

Sway Bar Bracket  
ABS Wire Clamps

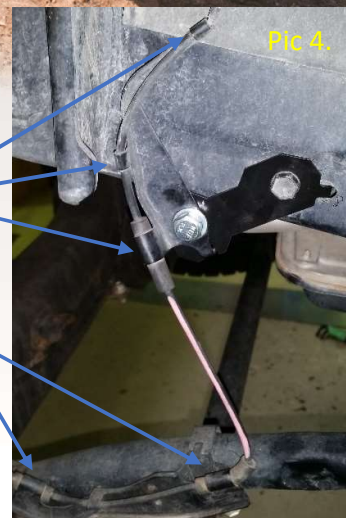


## Right Hand Side.

1. Insert cage nut (supplied), into right hand relocation bracket (supplied) as shown, Pic. 5.
2. Remove bolt that holds ABS wire bracket to sway bar, and using same bolt fix right hand relocation bracket (supplied) as shown Pic 6.
3. Fix vehicle ABS wire bracket to the relocation bracket with new bolt, spring washer and flat washer (supplied), as shown Pic 6.
4. Again, it may be necessary to manipulate the chassis and sway bar ABS bracket clamps and re position the wire protection tube and wire, so wire is **not too tight** at full suspension hang.
5. Ensure bolts are torqued.

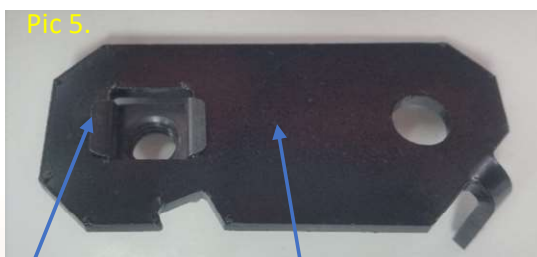

Cage Nut

Right Hand Relocation Bracket

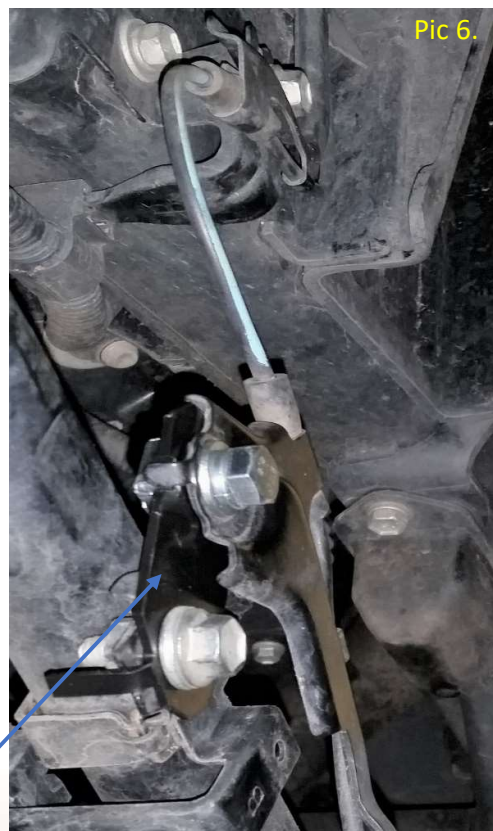

**GO RANCHO .COM**

\* For more information visit [gorancho.com](http://gorancho.com)