



WICHTIGER MONTAGEHINWEIS

**Thermostate 4006036, 4006042,
4006043, 4006044**


Schritt 1:

Alle Schrauben ansetzen

Schritt 2:

Schrauben in Reihenfolge 1-4 festziehen

Anzugsdrehmoment: 9 Nm

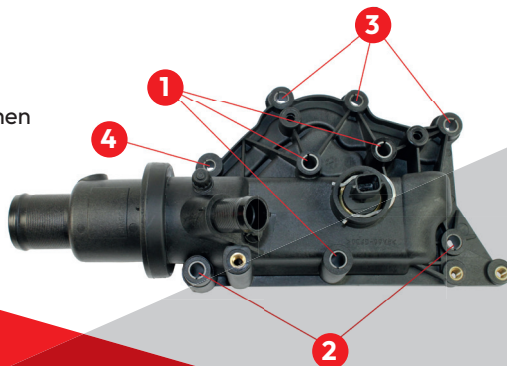



IMPORTANT INSTALLATION NOTICE

**Thermostats 4006036, 4006042,
4006043, 4006044**

Step 1:

Insert all screws

Step 2:

Tighten the screws in the order 1-4

Tightening torque: 9 Nm

