



# MAHLE

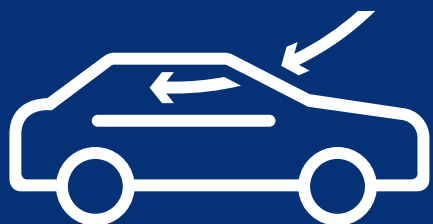

LA/LAK/LAO 1920

Audi  
Cupra  
Škoda  
VW

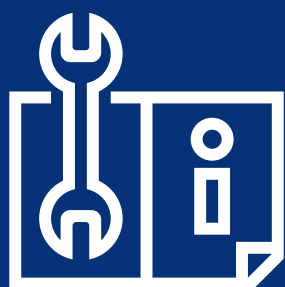

Montageanleitung  
Fitting instructions  
Instructions de montage  
Instrucciones de montaje

## LA/LAK/LAO 1920

AUDI, CUPRA, ŠKODA, VW

