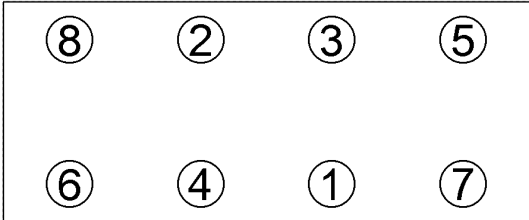


Anziehvorschrift für Zylinderkopf			018.050		 Das Original	
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse			VW / AUDI			
Prescripciones de apriete para culatas						
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
 130.110 M12x1,5x159						
Anziehen/ Tightening/ Serrage/ Apriete			* 35 Nm 60 Nm 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion						
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos		
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)		
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo		
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera		
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor						
✚ 1,1 mm, Ø 84 mm, 1 Loch/hole/trou/agujero Cyl. 4-6						
Mot.: ASB, BKN, BKS, BMK, BNG, BPP, BSG, CAPA 2,7 ltr./3,0 ltr. V6 Diesel						
A4, A5, A6, A8, Q7 Phaeton, Touareg						
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*018.050*			