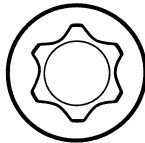


Anziehvorschrift für Zylinderkopf		117.771	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		PSA	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 758.300 M 10 x 175,5			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	20 Nm 120° 120°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 73,5 mm; $\frac{1}{4}$ 1,48 mm			
Mot: TU 9/C1A/C3A, TU 9M/CDY/CDZ TU 1M+/HDY/HDZ			
1,0 Ltr. - 1,1 Ltr. 4 Zyl.			
AX, Berlingo, Saxo, ZX, 106, 205, 306, Partner			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*117.771*	